

# BTGE Digital Torque Gauge

## Quick Start



- 1) Prior to first use, flip open display and remove plastic battery sheet by pulling on tab. .
- 2) Power ON and using arrow keys set counter to “000”
- 3) Press “MD” key for 2 seconds to enter set up menu
- 4) Setup Menu Select using arrow keys and save by pressing MEM key
  - Ar** Auto reset 0.1~5.0 sec. Select 0.0 for manual mode
  - bPS** Select baud rate 2400, 4800, 9600, 19200
  - bu** Buzzer On/Off

5) Using arrow keys move counter to count # 1 to start peak mode  
After collecting data, move count # to the highest count to be included in your calculations: Press MD key and press again to access each statistical function:

- Stt** Starting point leave at 1 for 1~ max count point
- n** Number of data in sample size
- HI** Highest value in data range
- LO** Lowest value in data range
- AV** Average value of data range

Deleting Data: Press C key at count# for individual deletions

For all data delete: Press MD Key to HI then hold Up key and C Keys together and release, display shows Clr