


Hydro-pneumatic blind rivet setting tools

TAURUS® 1-4 Axial (from October 2015)

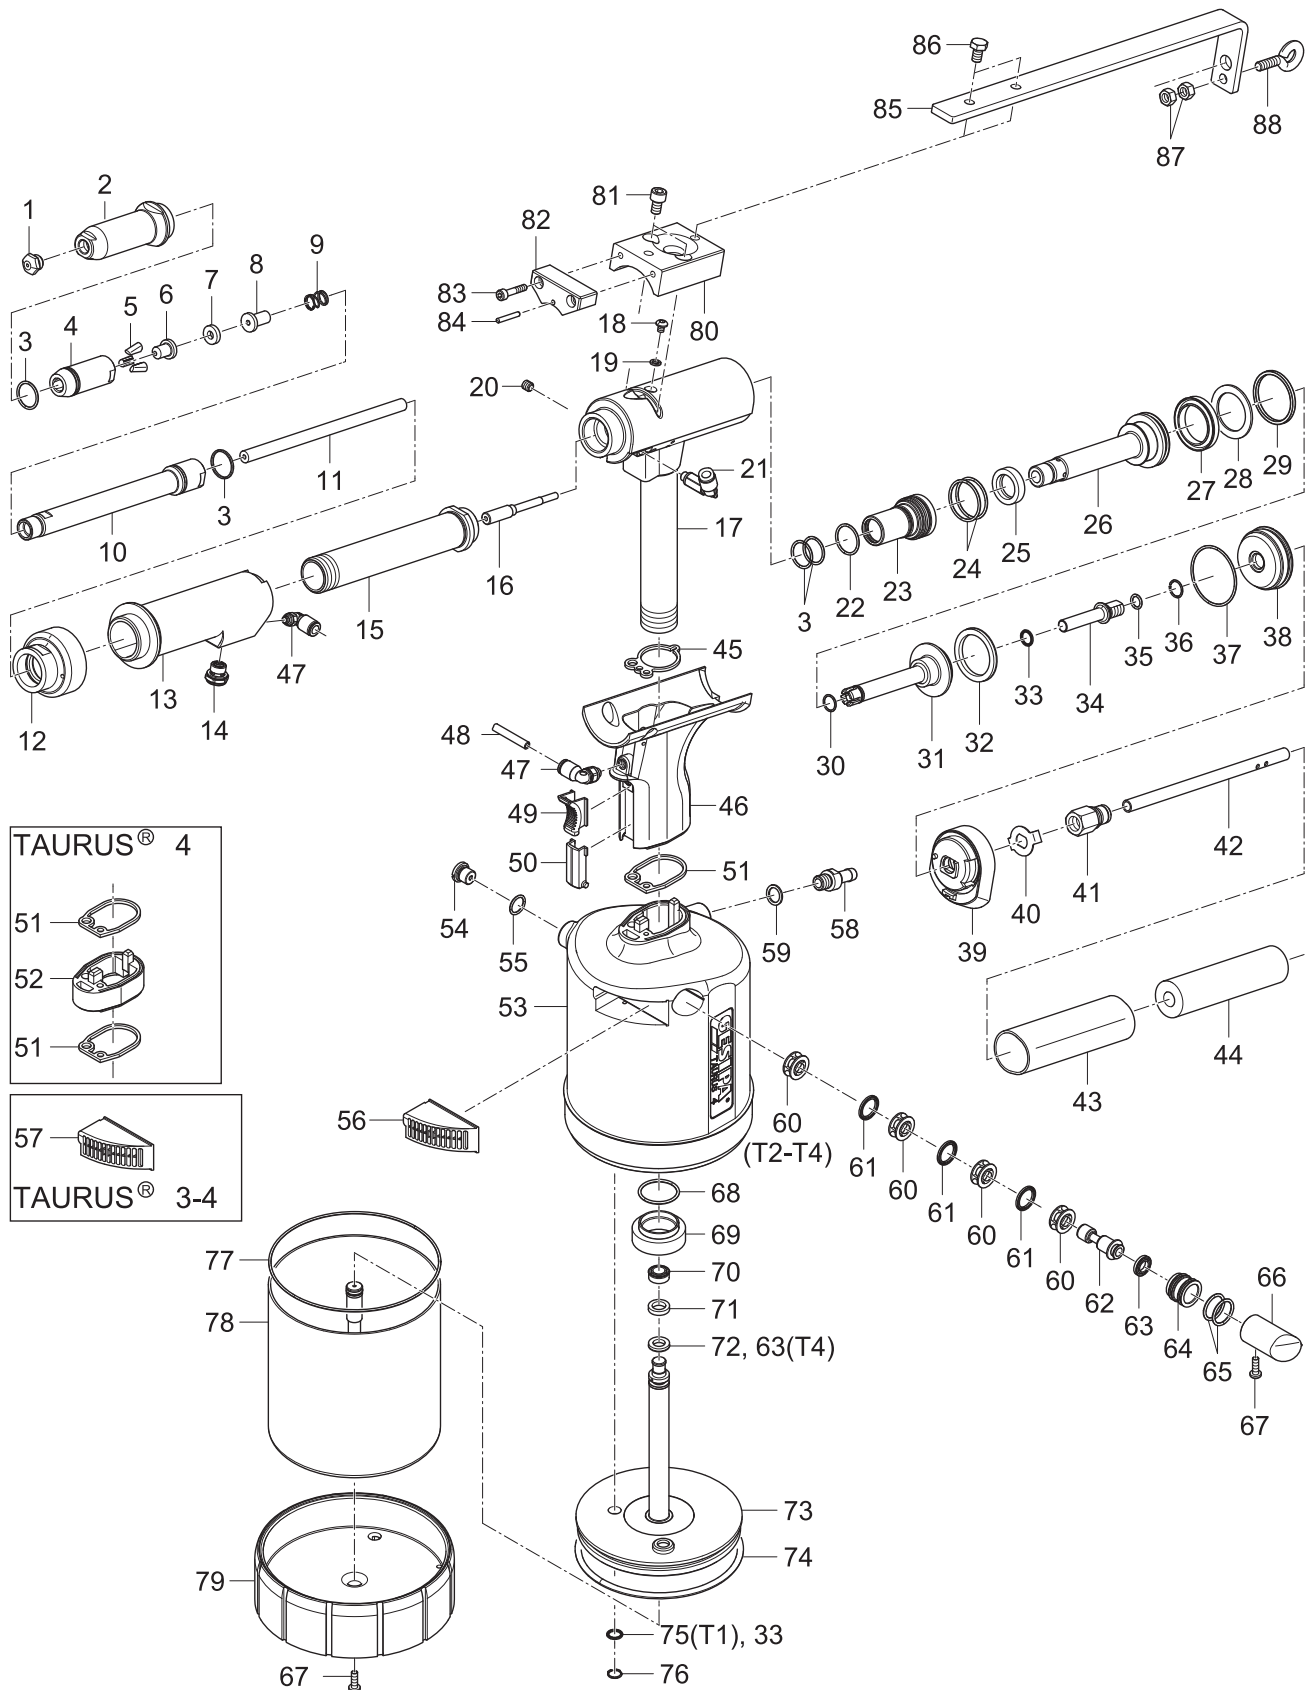

Hydro-pneumatic blind rivet setting tools

TAURUS® 1-4 Axial (from October 2015)

Spare part no.	TAURUS®-Type	Article no.	Designation
1 •	T1	143 4976	Nosepiece 17/18
		143 4994	Nosepiece 17/20
		143 5018	Nosepiece 17/22
	T2	143 4955	Nosepiece 17/24
		143 4973	Nosepiece 17/27
		143 4974	Nosepiece 17/29
		143 4975	Nosepiece 17/32
	T3	143 4977	Nosepiece 17/36
		143 4999	Nosepiece 17/40
		143 4860	Nosepiece 17/45
2		143 6003	Steel head sleeve 4
3 •		144 6012	O-ring
4 •		143 6002	Jaw housing
5 •		143 5568	Jaw (3-part)
6	T1	143 5507	Jaw pusher 1
	T2	143 5768	Jaw pusher 2
	T3, T4	143 6000	Jaw pusher 4
7		143 5999	Damping ring 4
8	T1	143 5509	Centre part 1
	T2	143 5769	Centre part 2
	T3, T4	143 6001	Centre part 4
9		146 3064	Spring
10		143 5863	Adapter, ext. 150mm
11	T1	143 5867	Adapter 1, ext. 150mm
12		143 5856	Adapter
13		143 6915	Grip Axial complete
14		143 6481	Trip valve
15		143 5857	Spacer
16	T1	143 5558	Nozzle tube 1
	T2	143 5764	Nozzle tube 2, long
	T3, T4	143 5886	Nozzle tube 3, long
17	T1	143 6479	Tool head 1, assembled
	T2, T3	143 6476	Tool head 2, assembled
	T4	143 6422	Tool head 4, assembled
18		144 6013	Oil screw plug
19		143 5612	Sealing ring M4
20		145 2756	Stud bolt
21		145 2755	Screw connection
22 •		143 5629	O-ring
23		143 5681	Seal holder, complete
24		143 4227	O-ring
25		143 5630	Rod seal
26		143 5631	Draw bar
27		143 5632	Piston seal
28		143 5488	Supporting ring
29		143 5485	Piston seal
30		143 5671	O-ring
31		145 7746	Resetting piston, complete
32		143 5633	Piston seal
33		143 5635	Rod seal
34	T1	143 5852	Connecting piece 1
	T2, T3, T4	143 5765	Connecting piece 2/3
35		143 5519	O-ring
36		144 6167	Snap ring
37		143 5524	O-ring
38		143 5532	End cap
39		143 5663	Adapter
40		143 5842	Lock washer
41		143 5848	Screw connection
42		143 5767	Hose
43		144 5647	Protective hose
44		143 5579	Foamed material tubes (0,1m)
45		143 5472	Flat gasket 1
46		143 6480	Grip FA, complete
47		144 6230	Screw connection
48		144 6134	Tube 0,1m*

Spare part no.	TAURUS®-Type	Article no.	Designation
49		143 5642	Slider
50		143 5686	Orifice
51		143 5480	Flat gasket 2
52	T4	143 5998	Grip extension
53	T1	145 0882	Air cylinder 1 Axial
	T2	145 0941	Air cylinder 2 Axial
	T3	145 0968	Air cylinder 3 Axial
	T4	145 0994	Air cylinder 4 Axial
54		145 7750	Pressure relief valve, complete
55		143 5484	O-ring
56	T2	145 7862	Silencer 2, complete
57	T3, T4	145 7956	Silencer 3, complete
58		143 5667	Connecting nipple
59		144 6030	Sealing ring
60		143 5648	Spacer cage
61		143 5647	Rod seal
62		143 5651	Control piston
63		143 5675	Piston seal
64		143 5652	Piston housing
65		143 5688	O-ring
66	T1	144 6026	Stopper 1
	T2	144 6073	Stopper 2
	T3, T4	144 6100	Stopper 3
67		144 5773	HousingsScrew, short
68		143 5486	O-ring
69		143 5492	Al nut
70	T1	143 5658	Piston seal
	T2, T3	143 5841	Piston seal
	T4	143 6007	Piston seal
71	T1	143 5657	Guide ring 1
	T2, T3	143 5825	Guide ring 2
	T4	143 6006	Guide ring 3
72	T1	143 5656	Piston seal
	T2, T3	143 5670	Piston seal
73	T1	145 7751	Air piston 1, complete
	T2	145 7860	Air piston 2, complete
	T3	145 7952	Air piston 3, complete
	T4	145 7994	Air piston 4, complete
74	T1	143 5660	O-ring
	T2	143 5834	O-ring
	T3, T4	143 5937	O-ring
75	T1	143 5659	Rod seal
76	T1	144 6027	Snap ring
	T2, T3, T4	144 6082	V-profile ring
77	T1	143 5680	O-ring
	T2	143 5839	O-ring
	T3, T4	143 5927	O-ring
78	T1	145 7752	Cylinder 1, complete
	T2	145 7861	Cylinder 2, complete
	T3	145 7953	Cylinder 3, complete
	T4	145 7995	Cylinder 4, complete
79	T1	143 5508	Bottom 1
	T2	143 5761	Bottom 2
	T3, T4	143 5874	Bottom 3
80		143 5538	Holder
81		144 5630	Allen screw
82		145 0895	Holder
83		145 2757	Allen screw
84		143 3954	Cylinder pin
85		143 5836	Hanger
86		144 6092	Hexagon head screw
87		144 5262	Nut
88		144 5342	Screw
		144 5294	Hydraulic oil refill bottle, 100 ml


• Wearing parts

* The length required must always be specified on the order; the article numbers always refers to the price per metre.



Hydro-pneumatic blind rivet setting tools

TAURUS® 1-4 Axial (up to and including September 2015)

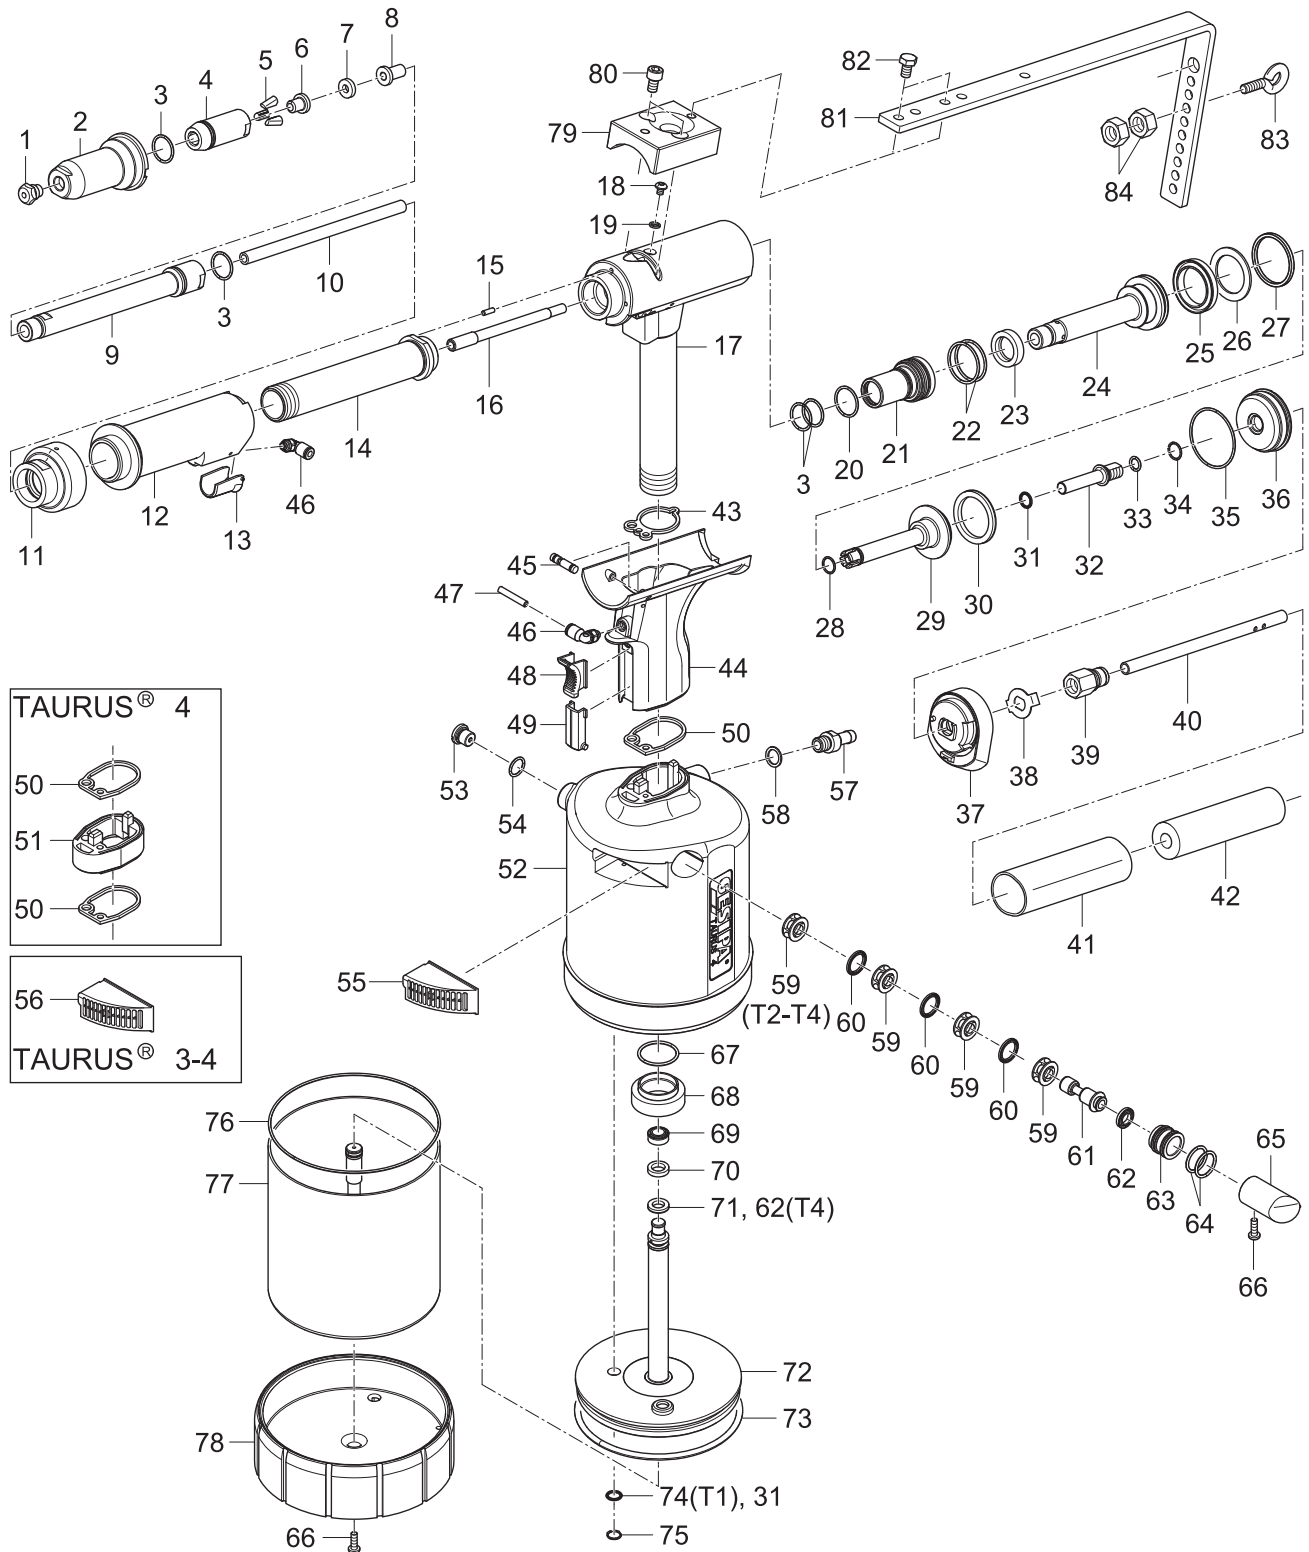

Hydro-pneumatic blind rivet setting tools

TAURUS® 1-4 Axial (up to and including September 2015)

Spare part no.	TAURUS®-Type	Article no.	Designation
1 •	T1	143 4976	Nosepiece 17/18
		143 4994	Nosepiece 17/20
		143 5018	Nosepiece 17/22
	T2	143 4955	Nosepiece 17/24
		143 4973	Nosepiece 17/27
		143 4974	Nosepiece 17/29
		143 4975	Nosepiece 17/32
	T3	143 4977	Nosepiece 17/36
		143 4999	Nosepiece 17/40
		143 4860	Nosepiece 17/45
2		143 6003	Steel head sleeve 4
3 •		144 6012	O-ring
4 •		143 6002	Jaw housing
5 •		143 5568	Jaw (3-part)
6	T1	143 5507	Jaw pusher 1
	T2	143 5768	Jaw pusher 2
	T3, T4	143 6000	Jaw pusher 4
7		143 5999	Damping ring 4
8	T1	143 5509	Centre part 1
	T2	143 5769	Centre part 2
	T3, T4	143 6001	Centre part 4
9		143 5863	Adapter, ext. 150mm
10	T1	143 5867	Adapter 1, ext. 150mm
11		143 5856	Adapter
12		145 7865	Grip
13		144 6025	Activation button
14		143 5857	Spacer
15		144 6091	Cylinder pin
16	T1	143 5558	Nozzle tube 1
	T2	143 5764	Nozzle tube 2, long
	T3, T4	143 5886	Nozzle tube 3, long
17	T1	145 7866	Tool head 1, assembled
	T2, T3	145 7867	Tool head 2, assembled
	T4	145 7868	Tool head 4, assembled
18		144 6013	Oil screw plug
19		143 5612	Sealing ring M4
20 •		143 5629	O-ring
21		143 5681	Seal holder, complete
22 •		143 4227	O-ring
23 •		143 5630	Rod seal
24		143 5631	Draw bar
25 •		143 5632	Piston seal
26 •		143 5488	Supporting ring
27 •		143 5485	Piston seal
28		143 5671	O-ring
29		145 7746	Resetting piston, complete
30 •		143 5633	Piston seal
31	T2, T3, T4	143 5635	Rod seal
32	T1	143 5852	Connecting piece 1
	T2, T3, T4	143 5765	Connecting piece 2/3
33		143 5519	O-ring
34		144 6167	Snap ring
35		143 5524	O-ring
36		143 5532	End cap
37		143 5663	Adapter
38		143 5842	Lock washer
39		143 5848	Screw connection
40		143 5767	Hose
41		144 5647	Protective hose
42		143 5579	Foamed material tubes (0,1m)
43 •		143 5472	Flat gasket 1
44		145 7869	Grip FA, complete
45		145 7747	Distributing valve, complete
46		144 6230	Screw connection

Spare part no.	TAURUS®-Type	Article no.	Designation
47		144 6134	Tube*
48		143 5642	Slider
49		143 5686	Orifice
50 •		143 5480	Flat gasket 2
51	T4	143 5998	Grip extension
52	T1	145 0882	Air cylinder 1 Axial
	T2	145 0941	Air cylinder 2 Axial
	T3	145 0968	Air cylinder 3 Axial
	T4	145 0994	Air cylinder 4 Axial
53		145 7750	Pressure relief valve, complete
54		143 5484	O-ring
55	T2	145 7862	Silencer 2, complete
56	T3, T4	145 7956	Silencer 3, complete
57		143 5667	Connecting nipple
58		144 6030	Sealing ring
59		143 5648	Spacer cage
60		143 5647	Rod seal
61		143 5651	Control piston
62 •		143 5675	Piston seal
63		143 5652	Piston housing
64		143 5688	O-ring
65	T1	144 6026	Stopper 1
	T2	144 6073	Stopper 2
	T3, T4	144 6100	Stopper 3
66		144 5773	Housingscrew, short
67		143 5486	O-ring
68		143 5492	Al nut
69 •	T1	143 5658	Piston seal
	T2, T3	143 5841	Piston seal
	T4	143 6007	Piston seal
70 •	T1	143 5657	Guide ring 1
	T2, T3	143 5825	Guide ring 2
	T4	143 6006	Guide ring 3
71 •	T1	143 5656	Piston seal
	T2, T3	143 5670	Piston seal
72	T1	145 7751	Air piston 1, complete
	T2	145 7860	Air piston 2, complete
	T3	145 7952	Air piston 3, complete
	T4	145 7994	Air piston 4, complete
73 •	T1	143 5660	O-ring
	T2	143 5834	O-ring
	T3, T4	143 5937	O-ring
74	T1	143 5659	Rod seal
75	T1	144 6027	Snap ring
	T2, T3, T4	144 6082	V-profile ring
76	T1	143 5680	O-ring
	T2	143 5839	O-ring
	T3, T4	143 5927	O-ring
77	T1	145 7752	Cylinder 1, complete
	T2	145 7861	Cylinder 2, complete
	T3	145 7953	Cylinder 3, complete
	T4	145 7995	Cylinder 4, complete
78	T1	143 5508	Bottom 1
	T2	143 5761	Bottom 2
	T3, T4	143 5874	Bottom 3
79		143 5538	Holder
80		144 5630	Allen screw
81		143 5855	Hanger
82		144 6092	Hexagon head screw
83		144 5342	Screw
84		144 5262	Nut
		144 5294	Hydraulic oil refill bottle, 100 ml

• Wearing parts

* The length required must always be specified on the order; the article numbers always refers to the price per metre.

