US-LT10 SERIES SCREWDRIVERS

EXPLODED VIEW

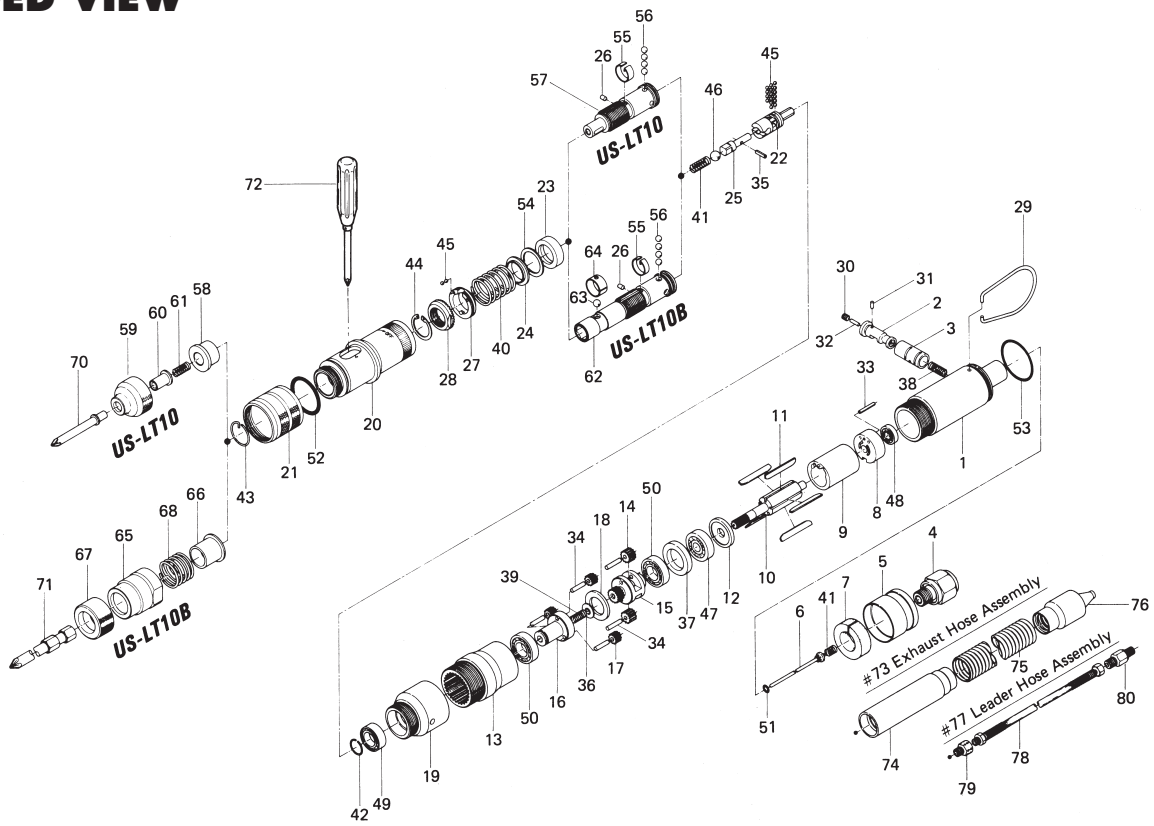

PARTS LIST — FOR REFERENCE ONLY

Index Number	Part Number	Description	Qty.
1	473-025-2	Casing	1
2	459-210-1	Reverse Valve	1
3	459-211-1	Reverse Valve Bushing	1
4	405-091-1	Air Inlet Rushing	1
5	459-782-1	Exhaust Deflector	1
6	459-881-1	Valve (with Rod)	1
7	459-835-2	Filter (K50)	1
8	459-285-1	Rear Plate	1
9	459-286-1	Cylinder	1
10	400-287-1	Rotor	1
11	400-288-1	Blade	5
12	400-289-1	Front Plate	1
13	459-029-2	Gear Casing	1
14	459-470-1	First Planet Gear	2
15	459-480-1	First Gear Cage	1
16	459-485-1	Second Gear Cage	1
17	459-471-1	Second Planet Gear	3
18	459-483-1	Gear Cage Spacer	1
19	459-037-1	Gear Casing Connector	1
20	473-369-2	Clutch Casing	1
21	473-370-2	Clutch Casing Sleeve	1
22	473-346-2	Cam	1
23	473-375-2	Cam Ring	1
24	473-164-2	Spring Setter	1
25	473-318-2	Pilot Pin	1
26	473-764-2	Notch Pin	2
27	473-562-2	Retainer	1
28	473-257-2	Regulating Screw	1
29	401-790-1	Suspension Ring	1
30	953-053-0	Allen Head Flat Point Screw (M3 x 3)	1
31	971-000-0	Pin (1.5 x 3)	1
32	971-001-0	Pin (1.5 x 5)	1
33	971-007-0	Pin (1.5 x 12)	1
34	972-009-0	Needle Roller (2 x 9)	5
35	973-001-0	Roll Pin (1.5 x 6)	1
36	975-008-0	Spacer (9 x 2 x 1)	1
37	975-105-0	Spacer (18.3 x 12 x 3.5)	1
38	976-035-0	Spring (36 x 10)	1
39	976-037-0	Spring (3.4 x 11)	1
40	976-379-0	Spring (15 x 18)	1
41	976-058-0	Spring (4.5 x 11)	2
42	978-080-0	Snap Ring (8 x 1)	1
43	978-141-0	Snap Ring (14 x 1)	1
44	979-351-0	Inner Snap Ring (IS TW 10)	1
45	981-000-0	Ball (1/16)	18
46	981-004-0	Ball (3/16)	1
47	987-017-0	Miniature Bali Bearing (R-1650)	1
48	987-112-0	Miniature Ball Bearing (L-1040)	1
49	987-122-0	Miniature Ball Bearing (L 1480)	1
50	987-123-0	Miniature Ball Bearing (L 1680)	2
51	990-901-0	O-Ring (SNS-3)	1
52	990-916-0	O- Ring (SNS-18)	1
53	990-590-0	O-Ring (17 x 1)	1
54	944-013-0	Back-up Ring (P-1 2)	1
55	473-670-2	Band	1
56	981-002-0	Ball (1/8)	4
PARTS FOR US-LT10			
57	473-319-2	Anvil	1
58	473-328-2	Bit Sleeve	1
59	473-057-2	Bit Casing	1
60	917-001-0	Finder (3.1 x 21 x 10)	1
61	976-048-0	Spring (4 x 10)	1
PARTS FOR US-LT10B			
62	473-319-6	Anvil	1
63	981-002-0	Ball (1/8)	1
64	470-356-8	Bit Band	1
65	473-057-4	Bit Casing	1
66	473-351-4	Bit Sleeve	1
67	473-567-4	Bushing	1
68	976-345-0	Spring (14 x 17)	1
ACCESSORIES			
70	916-110-0	(+) Bit (No.1 x 31) for US-LT10	1
71	916-137-0	(+) Bit (No.1 x 50) for US-LT10B	1
72	939-400-0	Torque Adjusting Driver (No.1)	1
OPTIONAL ACCESSORIES			
73	459-885-1	Exhaust Hose Assembly	1
74	459-779-1	Exhaust Stack Bushing Connector	1
75	935-500-0	Exhaust Hose	1
76	408-780-0	Exhaust Stack	1
77	934-201-0	Leader Hose Assembly	1
78	934-200-0	Air Hose Assembly	1
79	942-100-0	Connecting Screw (NPT1/8 x 1/8)	1
80	942-140-0	Connecting Screw (NPT1/4 x PS1/4)	1

FOOTNOTES

AIMCO
10000 SE PINE
PORTLAND, OR 97216
503-254-6600
FAX 503-255-2615

When ordering spare parts, please specify tool type, part number, and description.

REVISED 02/22