




TORQUE CUBE MOUNTING TEMPLATE


Select the appropriate mounting orientation to be used below. Tape the full scale diagram to the work surface and drill out the dark black area to the diameter shown. You will need two thru-bolts that are 3.375" (85mm) in length *plus* the thickness required to extend through the specific work surface to complete the installation.

**Drill Holes Thru Solid Black Area
3/8 in (9.5 mm) Diameter**

**TORQUE CUBE
MOUNTING TEMPLATE
*VERTICAL USE***

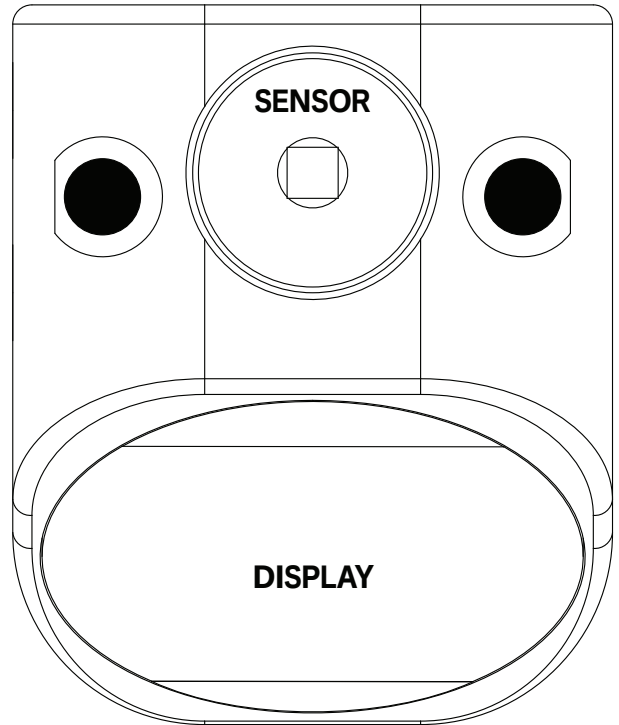

AUDITOR

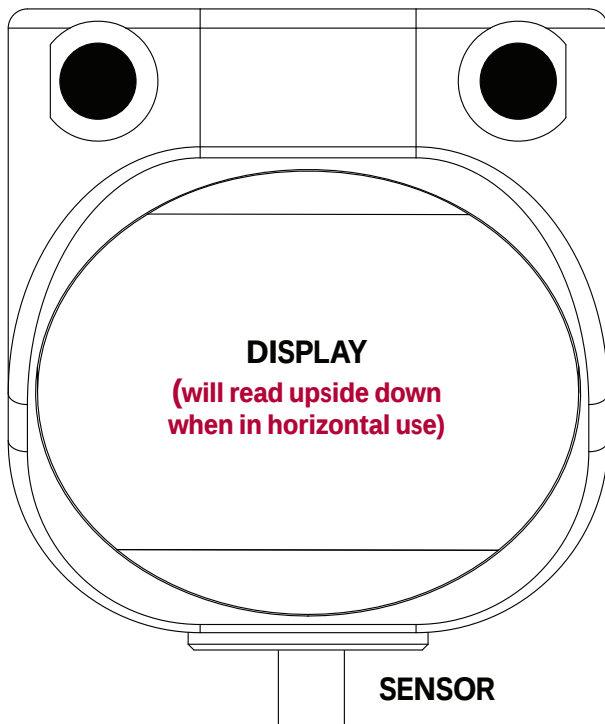

**Drill Holes Thru Solid Black Area
3/8 in (9.5 mm) Diameter**

**TORQUE CUBE
MOUNTING TEMPLATE
*HORIZONTAL USE***

**Global
Assembly
Solutions™**

CORPORATE HEADQUARTERS

10000 S.E. Pine St.
Portland, OR 97216
(800) 852-1368
FAX (800) 582-9015

1204 E. Maple Rd.
Troy, MI 48083
(800) 852-1368
FAX (800) 582-9015

Ave. Morones Prieto 2110 Pte.
Col. Loma Larga
Monterrey, NL CP 64710, Mexico
52-81 1001-1600
FAX 52-81 1001-1630

www.aimco-global.com

LIT-TM300, 11/07
Printed in USA
©2007 AIMCO

**** BE SURE YOUR PRINTER IS SET AT 100% - NOT AT "FIT TO PAGE" - SO THE TEMPLATE PRINTS AT THE CORRECT SIZE ****