

Asycube 240

Operating Manual




Document	Asyril_ASYCUBE-240_Operating_Manual_EN 000.100.500		
Version	A3	Date	23.06.2016

Table of Contents

1.	INTRODUCTION.....	4
1.1.	GENERALITIES	4
1.2.	SAFETY PRECAUTIONS	5
1.2.1.	<i>General safety precaution</i>	5
1.2.2.	<i>Danger</i>	6
1.3.	WARRANTY INFORMATION	7
1.4.	CE INFORMATION	7
1.5.	RELATED MANUALS	8
2.	DESCRIPTION	9
2.1.	FIRST GLIMPSE AT THE PRODUCT.....	9
2.2.	GENERAL CHARACTERISTICS.....	10
2.2.1.	<i>Technical features</i>	10
2.2.2.	<i>Overall dimensions</i>	11
2.2.3.	<i>Visual signals</i>	13
2.3.	PERFORMANCE.....	14
2.3.1.	<i>Picking surface</i>	14
2.3.2.	<i>Displacement of the parts</i>	14
2.4.	ELECTRICAL INTERFACES.....	16
2.4.1.	<i>Overview</i>	16
2.4.2.	<i>Power connection</i>	17
2.4.3.	<i>Communication</i>	19
2.4.4.	<i>Backlight Synchronization</i>	19
2.4.5.	<i>Digital input 1 and 2</i>	20
2.4.6.	<i>Digital output for hoppers 1 and 2</i>	20
2.5.	MECHANICAL INTERFACES	21
2.5.1.	<i>Attachment of the Asycube</i>	21
2.6.	ACCESSORIES AND OPTIONAL MODULES.....	22
2.6.1.	<i>Additional platform</i>	22
2.6.2.	<i>Backlight</i>	24
2.6.3.	<i>Cables</i>	24
3.	TRANSPORTATION, HANDLING AND INSTALLATION	25
3.1.	PACKAGING OF THE PRODUCT, TRANSPORTATION AND HANDLING	25
3.2.	BEFORE UNPACKING.....	25
3.3.	UNPACKING INSTRUCTIONS.....	26
3.4.	INSTALLATION AND STORAGE ENVIRONMENT.....	27
3.4.1.	<i>Installation environment</i>	27
3.4.2.	<i>Storage environment</i>	27

4.	MAINTENANCE AND REPARATION.....	28
4.1.	SAFETY PRECAUTIONS	28
4.1.1.	<i>General safety precautions</i>	28
4.1.2.	<i>Specific warnings.....</i>	28
4.2.	MAINTENANCE	29
4.2.1.	<i>Periodic maintenance schedule</i>	29
4.2.2.	<i>Remove the platform module.....</i>	30
4.2.3.	<i>Control and Cleaning of the platform.....</i>	30
4.3.	REPARATION.....	31
4.3.1.	<i>Exchanging / installing the backlight.....</i>	32
4.3.2.	<i>Recover IP address using default IP address</i>	37
4.4.	TECHNICAL SUPPORT	39
4.4.1.	<i>For better service</i>	39
4.4.2.	<i>Contact.....</i>	39
5.	ANNEXES	40
5.1.	CONDITION OF USE OF BACKLIGHT.....	40
5.2.	CE CERTIFICATE	44

 Experts in Flexible Feeding Systems	Asycube 240 - Asyri SA Operating Manual	© Copyright Asyri S.A.
Introduction	Version: A3	

1. Introduction

1.1. Generalities

The following document is the property of Asyri S.A. and may not be copied or circulated without permission. The information contained in this document is subject to change without notice for the purpose of product improvement. Before operating your product, please read this document in order to ensure a correct use of the product. Nevertheless, if you meet difficulties during the operation or the maintenance, please, feel free to contact Asyri customer service.

In this manual, the safety precautions that you must respect are classified as: “Danger”, “Warning” and “Note”; the following symbols are used:



DANGER!

Failure to observe the instruction may result in serious injury.



DANGER!

Failure to observe the instruction may result in electrocution or serious injury due to electric shock



WARNING!

Failure to observe the instruction may result in injury or property damage.



NOTE :

The user should read carefully this information to ensure the correct use of the product, although failure to do so would not result in injury.



REFER TO ...

For more information on a specific subject, the reader should read other manual, or refer to other paragraph.




WARNING!

Asyri shall not be liable whatsoever for any loss or damage arising from a failure to observe the items specified in “Safety Precautions.” The customer is responsible to provide the necessary instruction to the persons concerned.



NOTE :

All dimensions in this document are expressed in millimeters

 Experts in Flexible Feeding Systems	Asycube 240 - Asyri! SA Operating Manual	© Copyright Asyri! S.A.
Introduction	Version: A3	

1.2. Safety precautions

1.2.1. General safety precaution

1.2.1.1. Transport



DANGER !

Be aware of the weight and take care when transporting the system. For more information, please refer to chapter 3 “Transportation, handling and installation”

1.2.1.2. General



DANGER !

Be sure that all power sources and other cables to the unit are disconnected before working on the product.



DANGER !

Only qualified personnel (trained by Asyri! and with professional experience) are authorized to work on this device.



DANGER !

Do not unscrew the housing of the system controls. Serious injury or death could result from electric shock. Only authorized personnel from Asyri! SA are allowed to access this part of the system for maintenance or for repair.



DANGER !

Do not plug or unplug cables of the system unless it is switched off.



DANGER !

Never modify the product. Unauthorized modification may cause the product to malfunction, resulting in injury, electric shock, fire, etc.



DANGER !

Turn off the power to the product in the event of power failure. Failure to do so may cause the product to suddenly start moving when the power is restored.



DANGER !

Do not use the product in a place where it may come in contact with water or oil droplets.

1.2.1.3. Disposal

When the product becomes no longer usable or necessary, dispose of it properly as an industrial waste.



WARNING!

Observe the valid legal regulation for appropriate disposal protecting environment.

1.2.2. Danger

1.2.2.1. Safety Equipment for Operators

- For safety reasons operators must wear protective eyewear when using the backlight



NOTE :

It is the customer responsibility to install warning signs informing that anyone working around the Asycube must wear safety equipment.

1.2.2.2. Specific danger



Backlight

The Asycube has an integrated Backlight that persists of LEDs (Light Emitting Diodes). These LEDs emit visible or non-visible radiation depending on the color of the Backlight. LEDs illumination can create discomfort, cornea, retinal and lens damage.

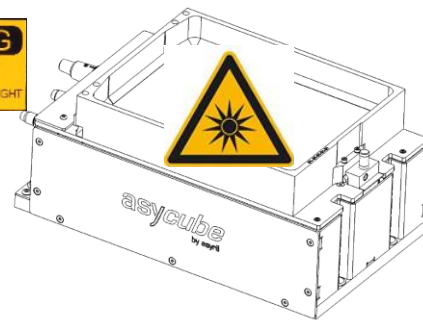


Figure 1-1 :Specific warnings

The used LEDs are class 0 according to the norm EN 62471, It is the responsibility of customers to document their own application and instruct employees on procedures to limit exposure to LED radiation. Following prevention agent can be suggested:

- Interpose, insofar as the job allows, a high pass filter at x nm depending on the color (see table below) under a fixed or adjustable connection between the source and the employee
- When the implementation of the foregoing is not possible, provide workers with goggles or face shield suitable for blocking radiation beyond 700nm;
- Prohibit or limit as possible direct access to the source (exposure in the axis of radiation), see "Conditions of use of products TPL VISION" below
- Establish a security perimeter to prevent operators from approaching the source at distances beyond the nominal ocular hazard recommended by the manufacturer
- In all cases, ensure that the means used properly mitigate exposure variables (characteristics of screens or goggles to choose based on wavelength which operators are exposed).



Refer to "5.1 Condition of use of backlight" on page 40 for the complete calculation sheet on minimal distance to respect for each kind of backlight.



Temperature

The active elements into the asycube make the surfaces shown on the picture heating up to 45°C in nominal use. This temperature can nevertheless increase to 55°C in extreme use.

It is the responsibility of customers to document their own application and instruct employees on procedures to avoid contact with these surfaces

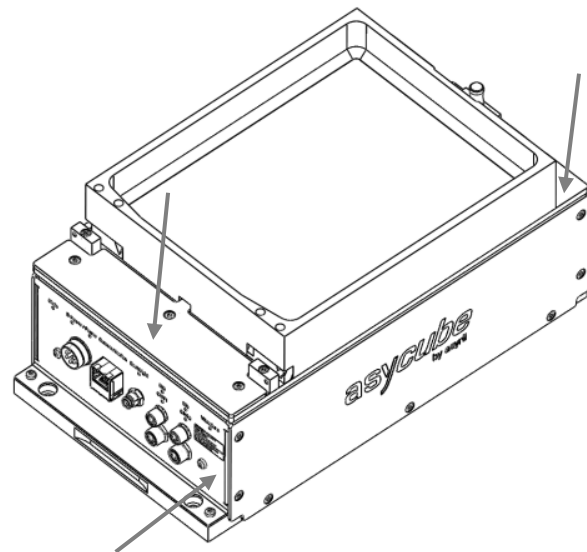


Figure 1-2 :Specific warnings

1.3. Warranty information

You will find all the Asyrl warranty information (duration, scope of warranty ...) on the general conditions of sale.

1.4. CE information

The declaration of incorporation as a partly completed machinery can be found here below.

NOTE:



The partly completed machinery (Asycube) must not be put into service until the final machinery into which it is to be incorporated has been declared in conformity with provisions of this directive, where appropriate.



Refer to "5.2 CE Certificate" on page 44 for the complete CE Certificate of the asycube 240.

asyril Experts in Flexible Feeding Systems	Asycube 240 - Asyrl SA Operating Manual	© Copyright Asyrl S.A.
Introduction		Version: A3

1.5. Related manuals

As described in the Table 1-1, this manual is an integral part of the Asycube documentation set. This manual covers the installation, a technical description, the maintenance, and the reparation of your system. Information on the transport and safety precautions are also included in this manual.

Manual Title	Manual reference	Description of the content
Unpacking Instructions	ASYCUBE-240_Unpacking_Instructions	Describes how to unpack your asycube.
Operating manual	ASYCUBE-240_Operating_Manual	THIS MANUAL
HMI manual	HMI_User_Guide	Accessible directly via the HMI
Programming guide	ASYCUBE-240_Programming_Guide	Describes the way of programming and integrating your Asycube in the final machine.
Plugin .NET	ASYCUBE_PLUGIN_.NET_Integration_Guide	Describes the Asycube dll's that are High-level libraries which helps to integrate Asycubes using .Net 3.5 environment.

Table 1-1 : related manuals

2. Description

2.1. First glimpse at the product

Asycube sets new standards in small part feeding. Its 3D vibratory platform allows fast and flexible presentation of small parts (1 mm to 40 mm) to a robot equipped with a vision system.

The core of Asycube is a platform that can vibrate in three orthogonal directions. By selecting appropriate vibration signals, a high flexibility in displacing parts on the platform is reached (forward, backward, sidewise) and flipping is made possible.

It consists of:

- (A) A 3D vibrating platform
- (B) Electrical interfaces (communication, power supply, I/Os...)



For more information on electrical interfaces to the Asycube, please refer to "2.4. Electrical Interfaces" on page 16

- (C) An integrated mechanism allowing to remove the platform easily without additional tooling
- (D) An integrated backlight (D) (optional) that allows an easy recognition of the parts from a camera placed above

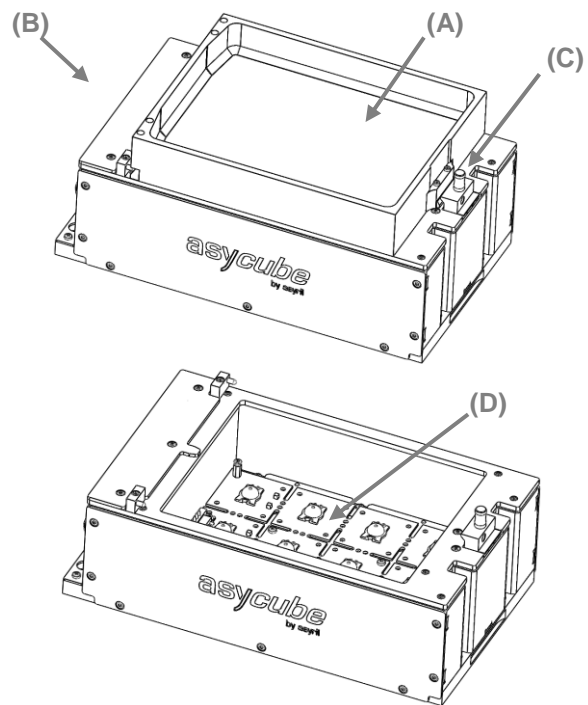


Figure 2-1 : Asycube overview



For more information on how to remove or change the platform, please refer to "4.2.2. Remove the platform module" on page 30



For more information on the procedure to control the platform vibrations, please refer to the HMI manual



For more information on the backlight color and the procedure to exchange the backlight, please refer to "4.3.1 Exchanging / installing the backlight" on page 32



2.2. General Characteristics



WARNING !

Do not use the product outside the specifications. In cases of non-respectation, the product guarantee will expire.

2.2.1. Technical features

Asycube <i>large</i> 240	
Typical part size	from 2 mm to 40 mm side length
Integrated high power LED backlight	Optional 
Interchangeable backlight color	<i>(green, red, blue, white, Infrared) please refer to "2.6.2 Backlight" on page 24 for more information.</i>
Independent vibrations in three orthogonal directions	
Interchangeable vibration surface	<i>please refer to section "2.6.1 Additional platform" on page 22 for more information.</i>
Vibration frequency configurable	up to 100 Hz
Maximal weight on the platform	0.4 kg
Digital Output for hoppers	2
Digital Input	2
Analog Output	2

2.2.2. Overall dimensions

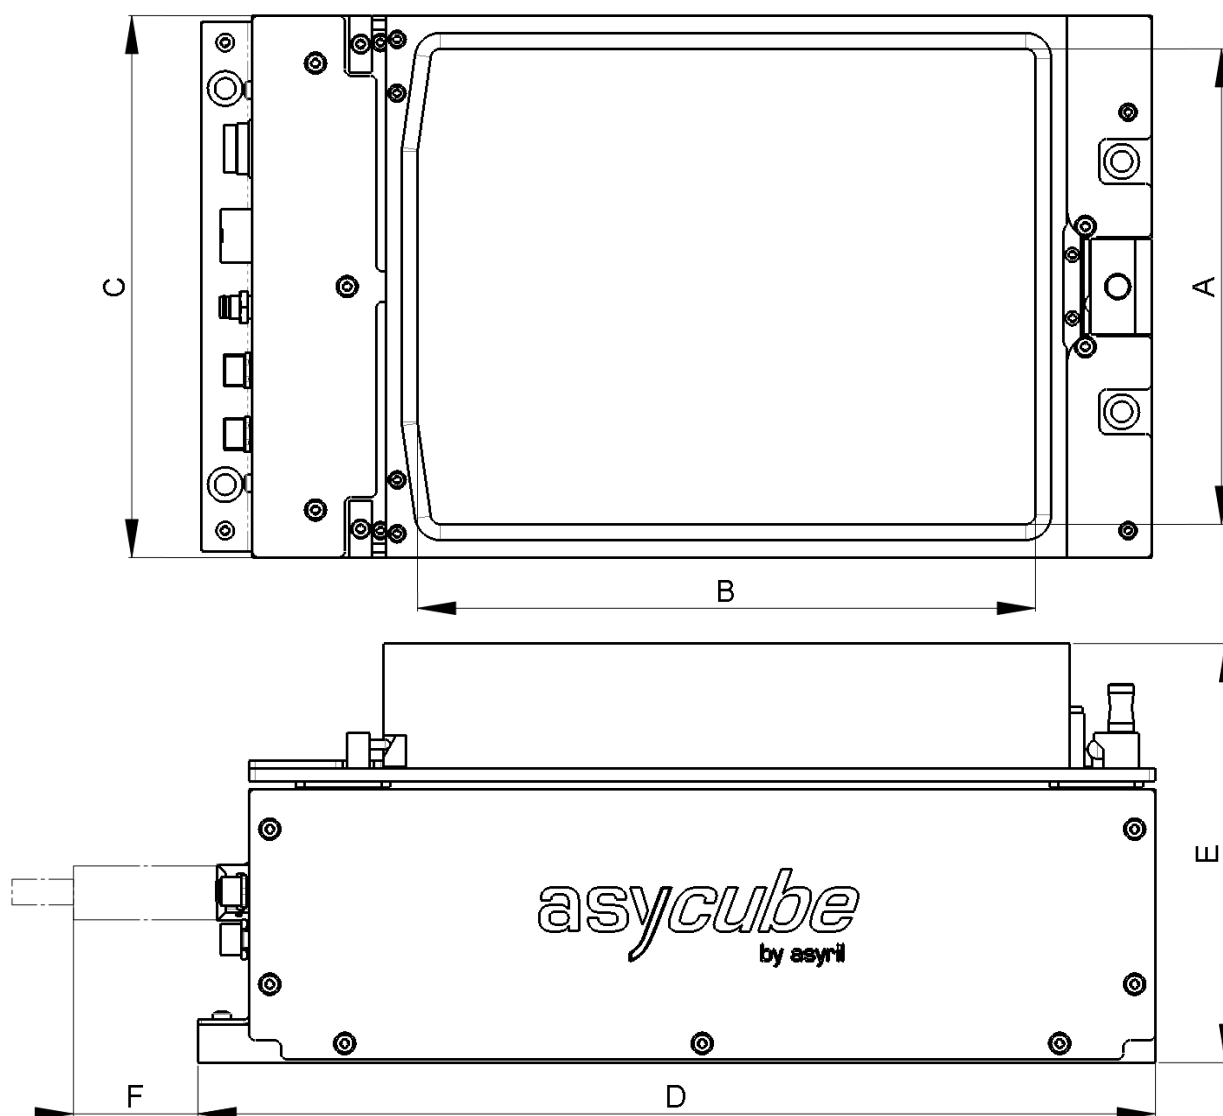


Figure 2-2 : overall dimensions largo 240

Characteristic	Asycube Largo 240	
Footprint	C	171 mm
	D	300 mm
	F	45 mm
Size of vibration platform	A	150 mm
	B	195 mm
	E	132 mm
Weight with platform and backlight		7.8 kg

asyril <small>Experts in Flexible Feeding Systems</small>	Asycube 240 - Asyrl SA Operating Manual	© Copyright Asyrl S.A.
Description	Version: A3	

Additional space is needed around the Asycube to be able to remove the platform module with the integrated tool :

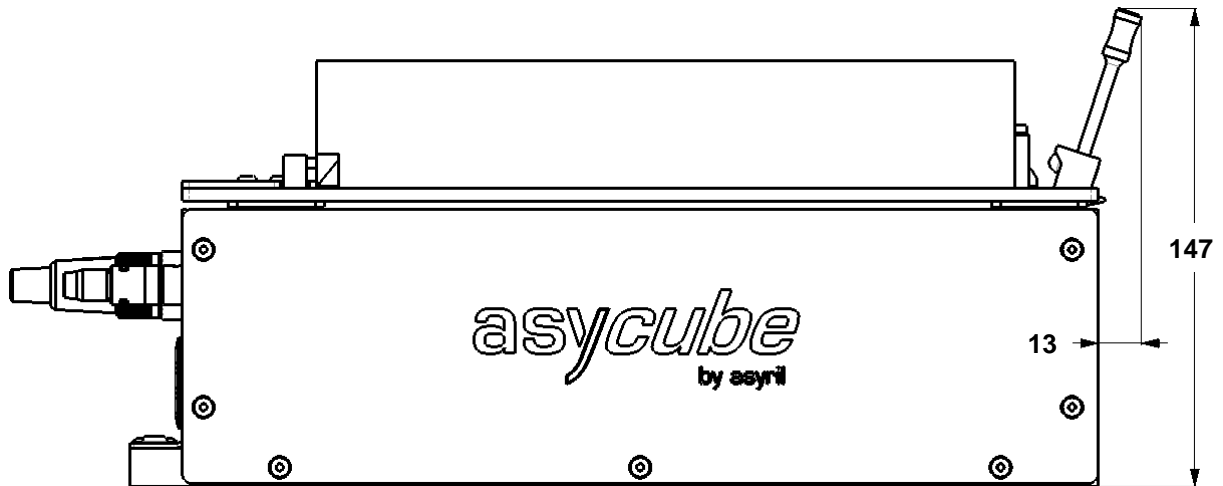


Figure 2-3 : overall dimensions with "lever"



Refer to "4.2.2 Remove the platform module" on page 30 for more information on how to remove the platform.

2.2.3. Visual signals

The led give important information on the state of the Asycube :

Led	State	Meaning
1	Blinking Time on : 100ms	System in standby
	Blinking Time on : 900ms	System in service
2	On	24V on S-Power input (see 2.4.2 for more information)
3	On	24V on Power input
4	Blinking	Communication (Send/Receive TCP packet)
5	On	24V on backlight synchronization input
6	On	24V on input 1
7	On	24V on input 2
8	On	Platform vibrating
9	On	24V on output 1
10	On	24V on output 2

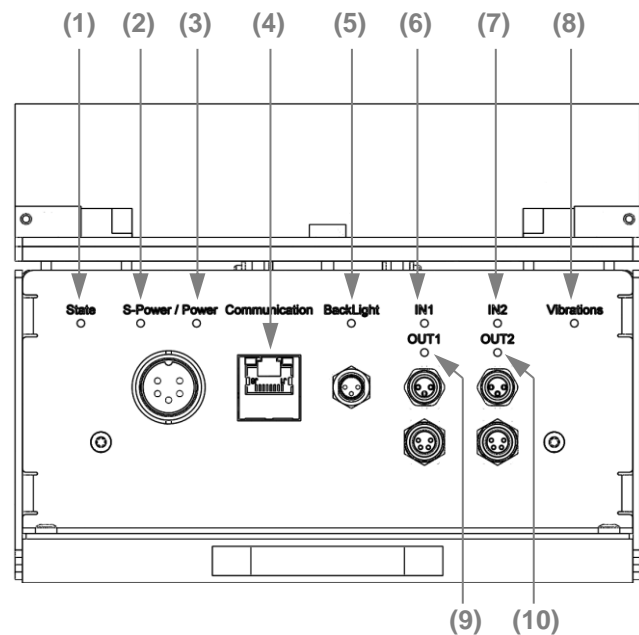


Figure 2-4 : Asycube Operating Indicator LEDs

2.3. Performance

2.3.1. Picking surface

The maximum picking surface dimensions corresponds to the Asycube platform size :

A	195
B	150

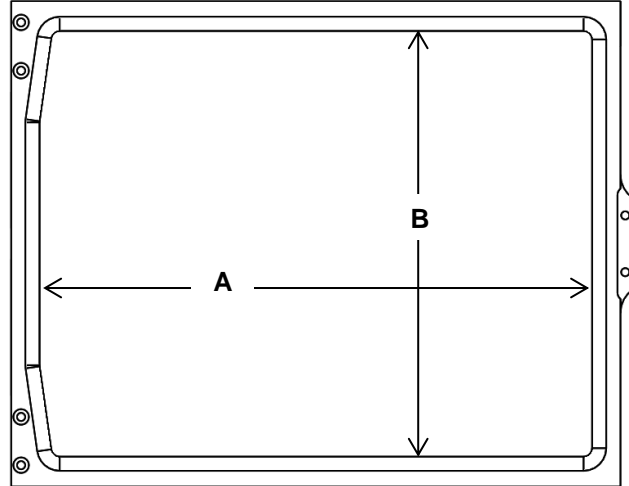


Figure 2-5 : Picking surface

2.3.2. Displacement of the parts

2.3.2.1. Standard movement

To define a specific movement with the Asycube several parameters need to be configured. For each movement on the cube, twelve parameters must be set. Calling these twelve parameters will generate specific vibrations (corresponding to the sum of the movements of the four actuators in each corner of the platform).

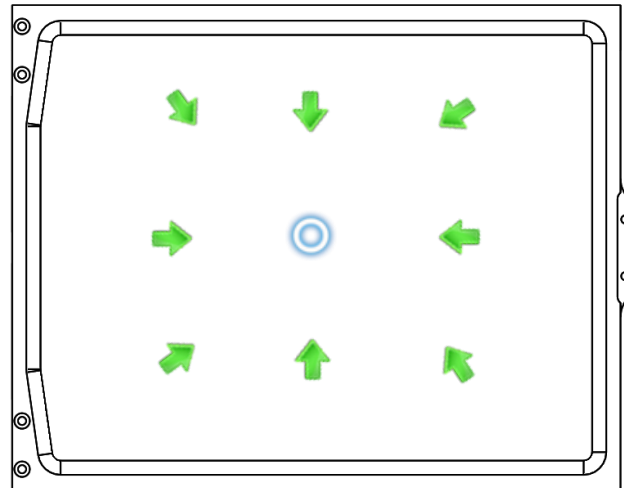


Figure 2-6 : predefined displacement of the parts

The figure on the right shows the predefined standard movements.

2.3.2.2. Advanced movement

On the Asycube 240, advanced movements can be achieved. Indeed, it is possible to center the components along the long side or the short side of the plate, as represented on the figure on the right.

With a sequence of three movements you can spread easily the parts on the surface :

1. Center (long side)
2. Center (short side)
3. Flip

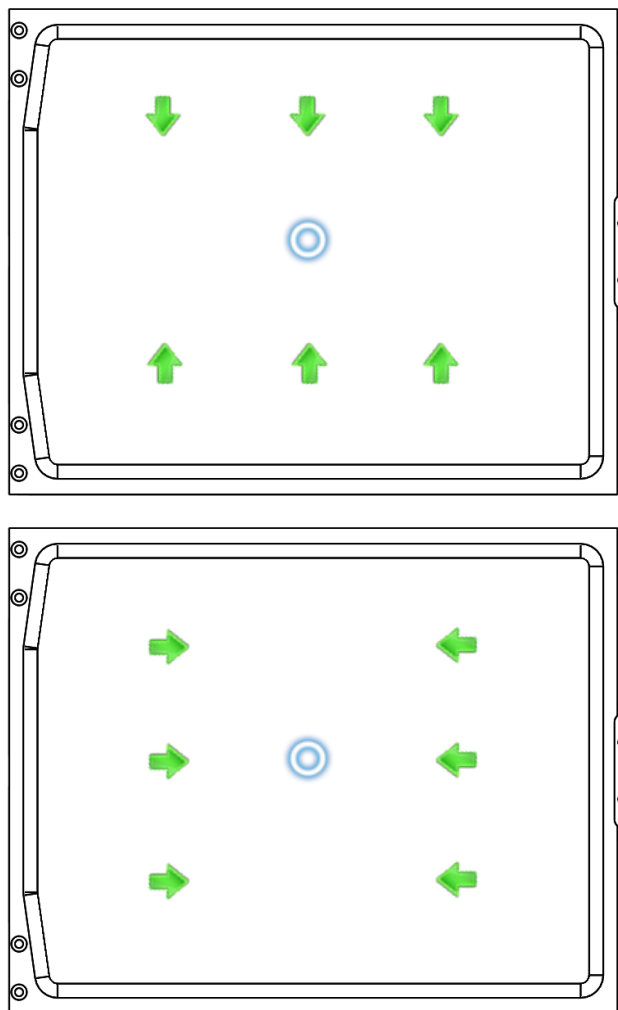


Figure 2-7 : predefined displacement of the parts



For more information on these parameters, and to learn how to configure them, in order to control the cube vibrations, please refer to the User manual

2.4. Electrical Interfaces

2.4.1. Overview

Asycube is a standalone module with its own controller. The electrical interfaces to the Asycube are situated at the back of the product:

- (A) Power connection
- (B) Ethernet connection (RJ45)
- (C) Backlight synchronization
- (D) Digital Input 1
- (E) Digital Input 2
- (F) Digital and analog Output 1 for hopper
- (G) Digital and analog Output 2 for hopper

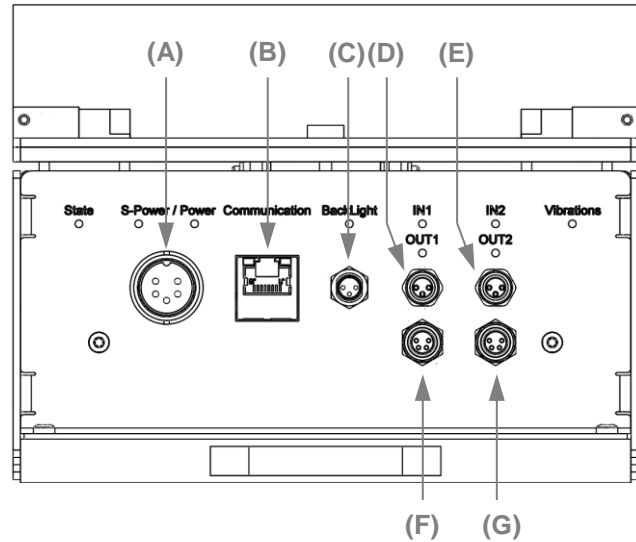


Figure 2-8 : Electrical interfaces to the Asycube



NOTE :

The cables are not part of the feeder, but can be ordered separately.
(Please, refer to chapter 2.6.3 "Cables")

2.4.2. Power connection

WARNING !



- Before supplying power to the Asycube, check that your distribution voltage is the same as the nominal voltage.
- Never disconnect the power cables. Always turn the machine off and then cut the power
- Use PELV (protected extra-low voltage) nominal voltage

Pin	Signal description
(1)	24VDC PELV S-Power
(2)	0V GND S-Power
(3)	24VDC PELV Power
(4)	0V GND Power
(5)	EARTH

Connector type (on asycube side) :
M16, 5 Poles, male

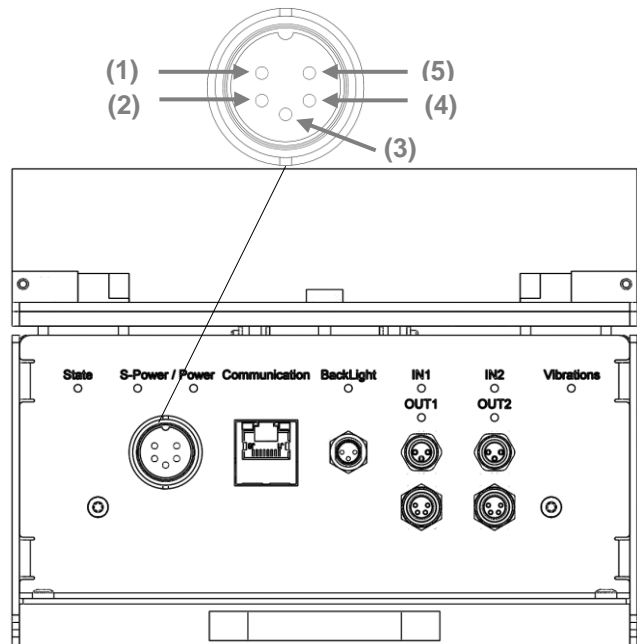


Figure 2-9 : power connection

In case of all functions working simultaneously (vibration, backlight, outputs), the current increases to 8A.

Characteristic	Value
Voltage	+24V DC \pm 5%
Current Power	5A
Current S-Power	3A

NOTE:



S-Power is the safety power for the backlight. Cutting this S-Power ensures that the backlight stays OFF (e.g. to secure IR backlight danger).

The following connection schematic shows the way to connect the asycube depending if your application requires using an external relay to ensure that the backlight is safely switched off or not.

In any case, both "Power" and "S-Power" have to be supplied for using the backlight.

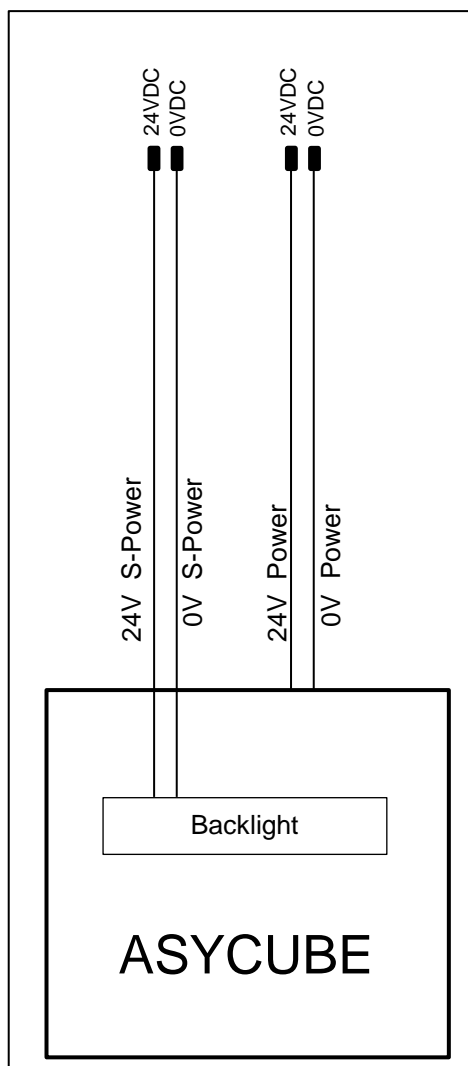


Figure 2-10

Power connection without safety relay

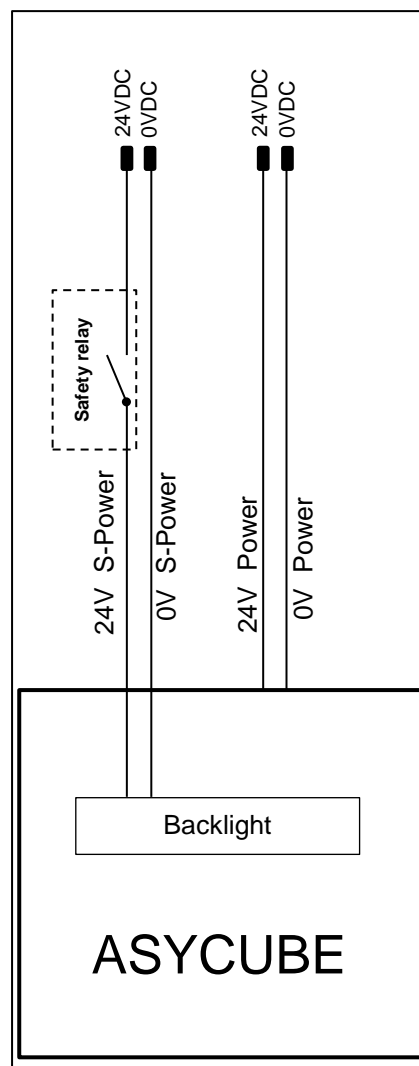


Figure 2-11

Power connection with safety relay



Note:

Both Power and S-Power can be connected to a single power supply or to two different power supplies

2.4.3. Communication

The communication with the Asycube is established by a standard Ethernet communication via RJ45 port **(A)**

Characteristic	Value
Default IP address	192.168.127.254
Default subnet mask	255.255.255.0
Port	4001
MAC address	Can be read by ARP request



For more information on the procedure to restore the default IP address, please see chapter 4.3.2.

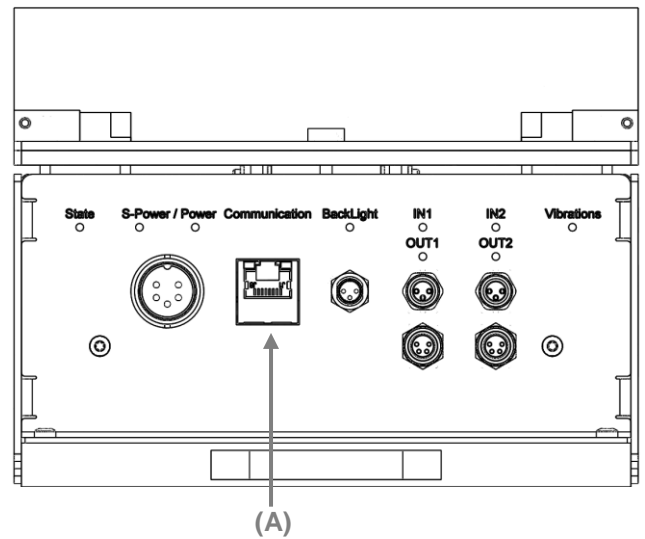


Figure 2-12 : Ethernet connection RJ45

2.4.4. Backlight Synchronization

A standard M8 three-pins female cable enables to synchronize camera acquisition and Asycube backlight illumination, it must be connected as follows :

Pin	Signal
(1)	Not wired
(3)	0V GND
(4)	+24 V pulse (illumination synch.)

Connector type (on asycube side) :
M8, 3P, male

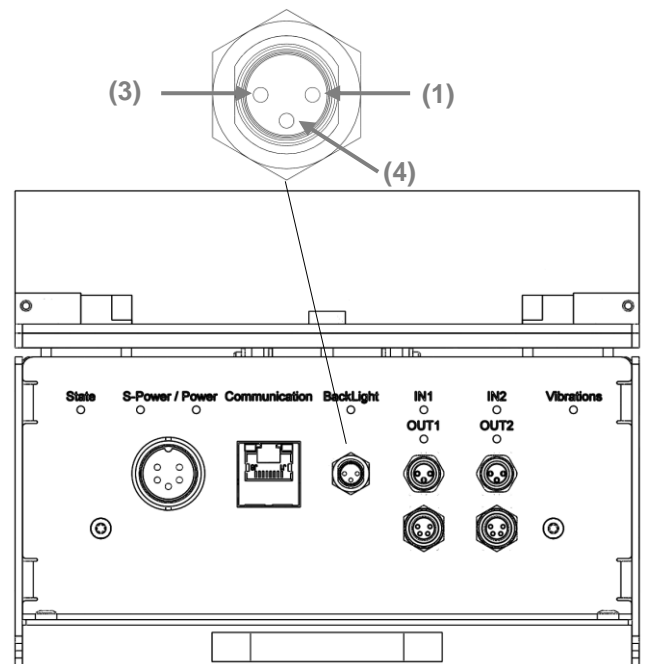


Figure 2-13 : Backlight synchronization

NOTE :



The Asycube Backlight illumination time corresponds to the length of the pulse signal.

2.4.5. Digital input 1 and 2

A standard M8 three-pins male cable enables to read two different signals, it must be connected as follows :

Pin	Signal
(1)	+24VDC OUT (sensor power supply)
(3)	0V GND
(4)	Input (+24VDC)

Connector type (on Asycube side) :
M8, 3P, female

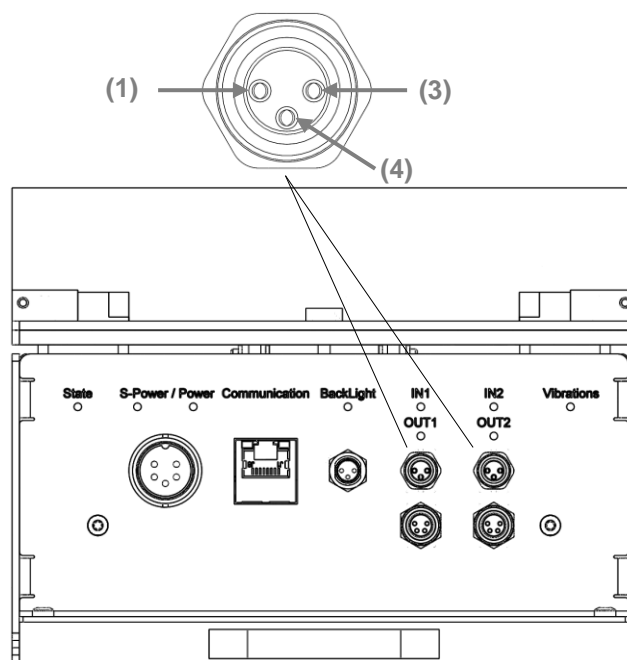


Figure 2-14 : Digital input

2.4.6. Digital output for hoppers 1 and 2

A standard M8 four-pins male cable enables to transmit digital output signal and analog output signal to hopper. It must be connected as follows :

Pin	Signal	Hopper
(1)	0V GND	Analog Output 1
(2)	0...10VDC	
(3)	0V GND	Digital Output 1
(4)	+24VDC	

Connector type (on Asycube side) :
M8, 4P, female

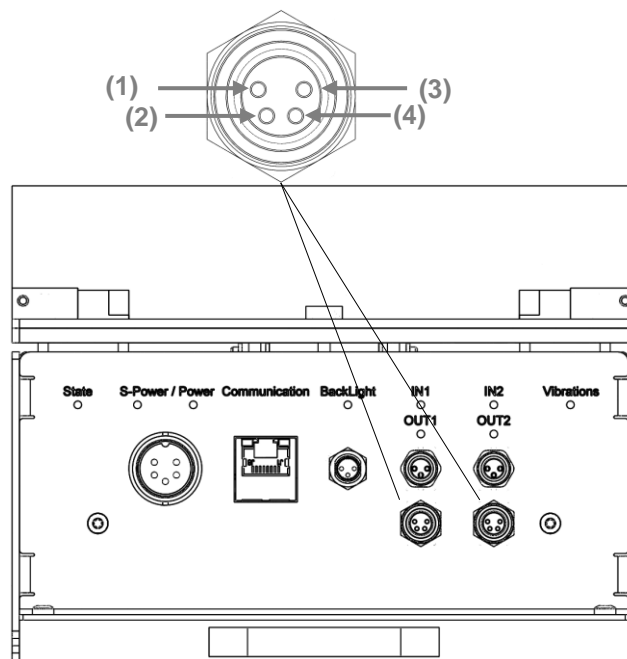



Figure 2-15 : Digital output for hoppers

 Experts in Flexible Feeding Systems	Asycube 240 - Asyrl SA Operating Manual	© Copyright Asyrl S.A.
Description	Version: A3	

2.5. Mechanical Interfaces

2.5.1. Attachment of the Asycube

To guarantee a proper behavior of the Asycube a tight fastening to a solid underground is necessary. The holes in the base plate of the Asycube can be used to attach it with four M6 screws.

Repeatable positioning of the Asycube can be done by using positioning pins (possible on both sides).

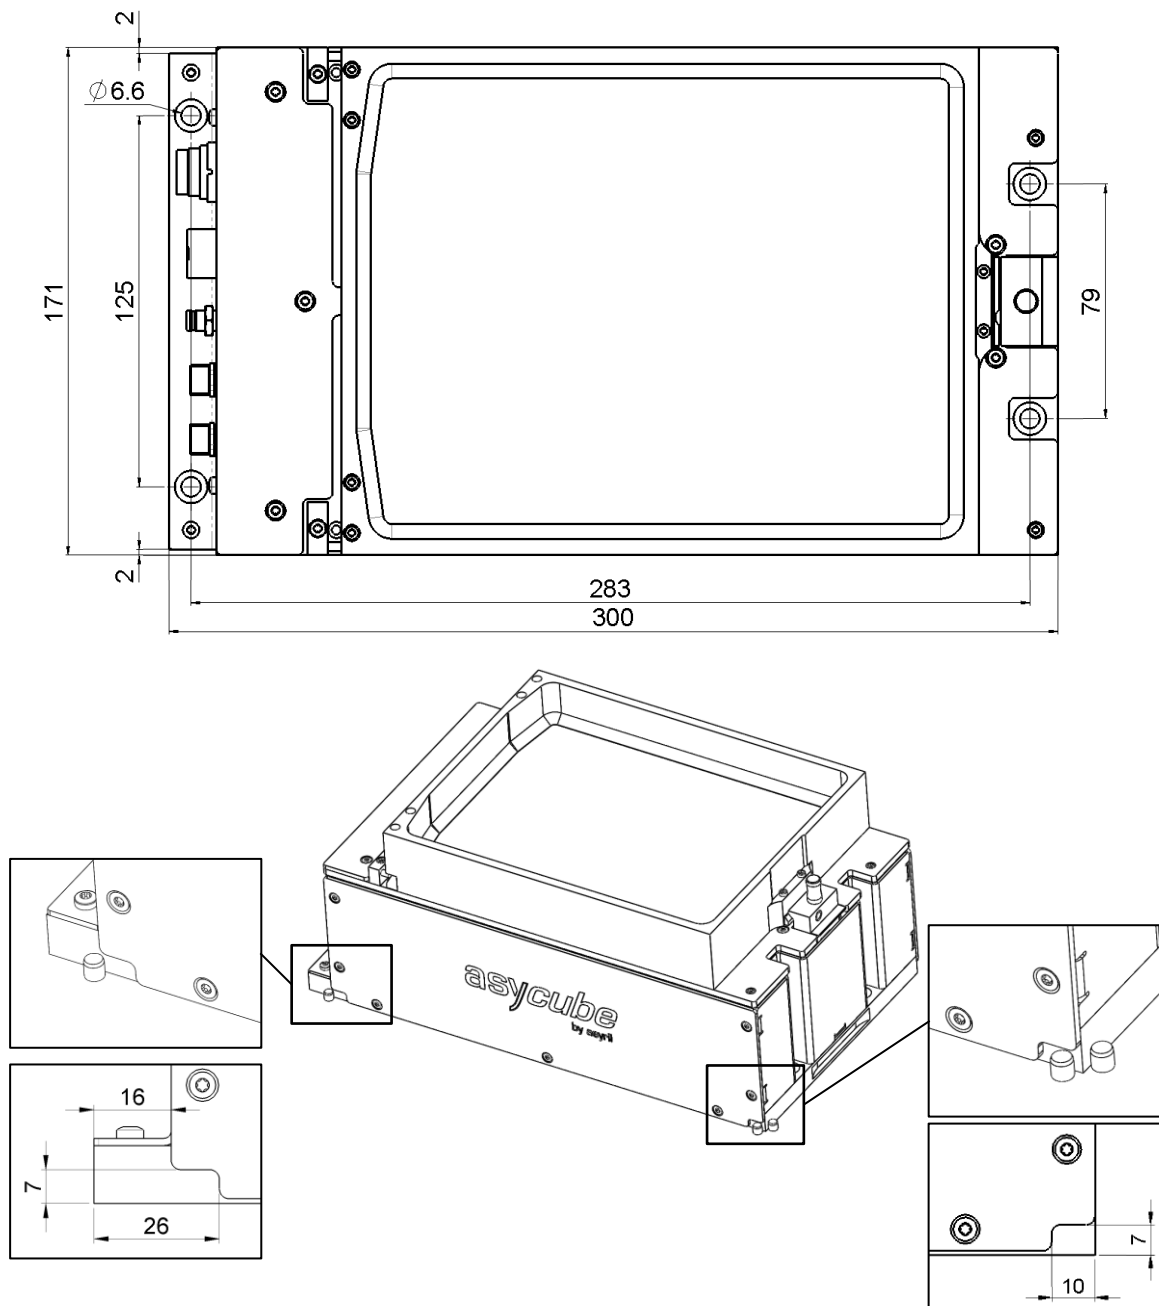


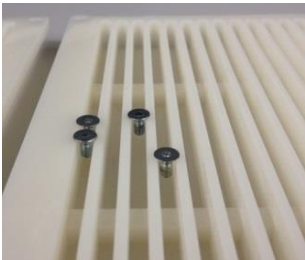
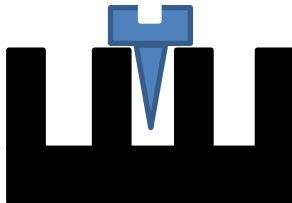

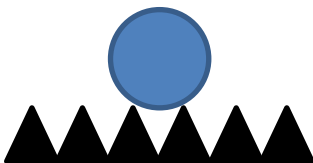




Figure 2-16 : attachment of the Asycube



2.6. Accessories and Optional modules

2.6.1. Additional platform

In order to improve the availability of certain components on the surface of the feeder, it is possible to structure the plate surface. Asyrl can provide various types of plates on request. Frequently used structures on Asycube 240 are as follows:

Plate type	Example – picture	Example – drawing	Advantage
Flat		 Ex : Bolts	This type of plate can be used for a large variety of components mainly components with a flat surface allowing a stable resting position.
Grooves (deep)		 Ex : Screws, Rivets	Screw type components can be fed in vertical position when the plate is structured with deep grooves.
Grooves (wide)		 Ex : Cylinders, Needles	Wide grooves are useful when cylindrical components are fed. They reduce the stabilising time significantly after component displacements on the plate surface (stop the components from rolling on the surface).
Grooves (narrow)		 Ex : Thin washers	Narrow grooves are necessary to reduce surface contact especially for flat and light components. This reduces adhesion forces and improves the component displacements on the feeder surface. It also improves the pick-performance of the robot.

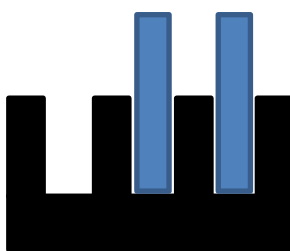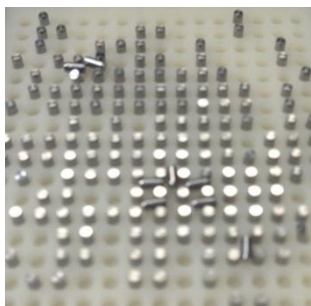Holes



Holes are useful when cylindrical components are to be fed and presented upright.


Ex : Pins

NOTE :

For more information on these bespoke platforms, contact Asyrl customer's service.

The customer can also make his own platforms, in this case plate fixation kits can be ordered by Asyrl

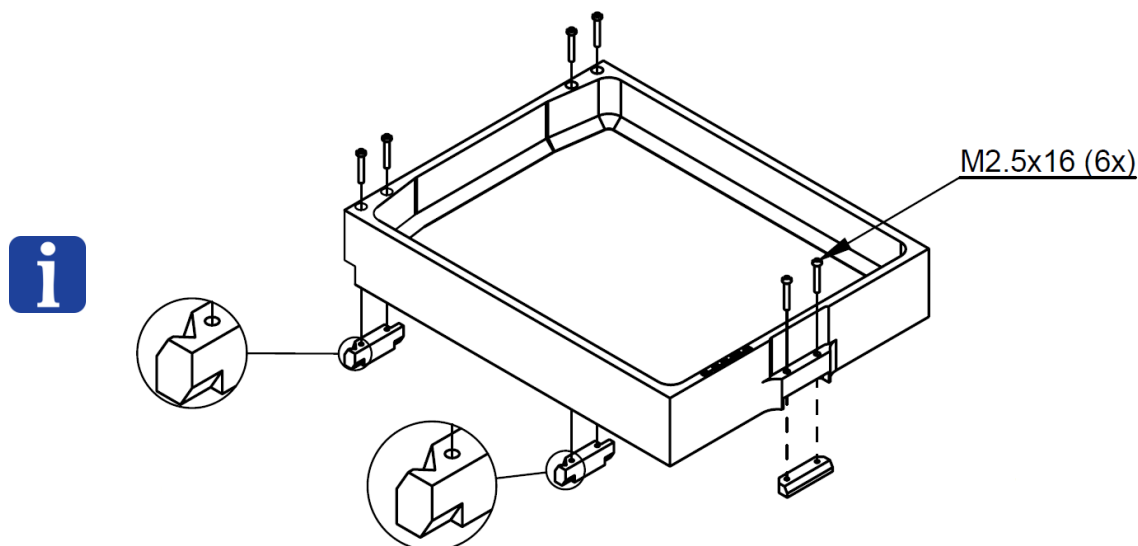Asycube 240



Product	Part number
Fixation kit 240	660.005.988

The table below indicates the article number of a standard (not structured platform)

Product	Part number
Asycube standard platform (flat)	660.005.776

2.6.2. Backlight

Following backlights are available:

Backlight Asycube 240		
Color	Wavelength	Part Number
Blue	465 nm	900.006.095
Green	550 nm	900.006.093
Infrared	850 nm	900.006.097
Red	645 nm	900.006.094
White	6500 K	900.006.096

If this option is ordered at the same time with the asycube, it is delivered mounted in the feeder



For more information on the backlight color and the procedure to exchange the backlight, please refer to “4.3.1 Exchanging / installing the backlight” on page 32



NOTE :

For more information on these bespoke backlights, contact Asyrl customer's service.

2.6.3. Cables

Following cables are available:

Product	Part Number
Power cable (5m)	900.006.215
Ethernet RJ45 cable (5m)	601.000.218
Synchro-backlight cable (5m)	900.006.223
Input Cable (5m)	900.006.224
Output cable (5m)	900.006.225



NOTE :

For more information on these cables, contact Asyrl customer's service.



WARNING :

All these cables are **NOT** adapted for cable carriers (cable tracks).

3. Transportation, handling and installation

3.1. Packaging of the product, transportation and handling

The transportation of the product must be made in accordance with the specific terms indicated on the package (top, bottom and fragile ...). In addition, pay particular attention to the following points :

WARNING !



- Be aware of the weight and take care when transporting the system.
- Always hold the system firmly with two hands.
- The operator should not carry heavy shipping boxes by himself.
- If the shipping box is to be left standing, it should be in a horizontal position.
- Do not climb on the shipping box.
- Do not place heavy objects, on top of the shipping box.

The Asycube is shipped in a cardboard of the following dimensions:

Asycube 240	
Dimensions	550x400x300 mm
Gross weight	12 kg

Table 3-1 : gross weight and dimensions of the product when packaged

3.2. Before unpacking

Before unpacking, look at the ShockWatch Label.

If the Shockwatch is red, or if any evidence of damage during transit is detected please :

- (A) request that the carrier's agent be present at the time of unpacking.
- (B) pay special attention to any damage on the exteriors of the product
- (C) If any damage has occurred, do not sign the delivery slip and contact Asyri
- (D) In every cases, make a notation on the delivery slip




Figure 3-1 : ShockWatch



NOTE :

If the items received do not match to your order, or are damaged, do not sign the receipt, and contact Asyri as soon as possible.

 Experts in Flexible Feeding Systems	Asycube 240 - Asyri! SA Operating Manual	© Copyright Asyri! S.A.
Transportation, handling and installation	Version: A3	

3.3. Unpacking instructions



NOTE

Do not remove the Asycube from its packaging until you are ready to install it.



WARNING !

Keep the packaging material and the shipment box in case of return

Locate the identification sticker at the back of the product and ensure that the product you have received is the appropriate one.

Important information is on this sticker; such as the power consumption or the serial number that you will need for any kind of correspondence with Asyri!.

Asyri! SA – Switzerland www.asyri!.com Article N° : xxx xxx xxx Type: ASYCUBE-240 Input voltage 24VDC Serial N°: xxxxxx

Figure 3-2 : Product sticker

3.4. Installation and storage environment

WARNING !



The Asycube must be mounted on a smooth, flat and strong surface. Ensure yourself that the Asycube is not submitted to mounting flexure. Failure to do so would degrade feeder performance.

3.4.1. Installation environment

The Asycube can be used under following conditions:

- The asycube is IP20
- Working temperature: +5°C to +40°C
- Humidity: 30% to 80%max. non-condensing

WARNING !



In the case humidity or temperature variation, note that it might affect the global performances of the Asycube.

- Avoid extreme electromagnetic waves, ultraviolet rays and radiation.
- Avoid using the product in a place where the main unit or controller may be exposed to water or oil droplets.
- Clean room application: cleanliness class ISO7

WARNING !



Do not use the product in an atmosphere of corrosive gases. Rust may form and reduce the structural strength of the product.

3.4.2. Storage environment

The storage environment should be similar to the operating environment. In addition, you should protect the Asycube against dust

4. Maintenance and reparation

4.1. Safety precautions

4.1.1. General safety precautions

WARNING !



There are no user serviceable parts inside the product. Contact Asyri! or your local supplier to effect maintenance. In cases of non respectation, the product guarantee will expire.

DANGER !



Do not operate the system when it is damaged. Please ensure yourself before use that no visual defects are detected.

DANGER !



Power down the system and unplug it from the mains before any kind of maintenance.

DANGER !



Do not pour water onto the product. Spraying water over the product, washing it with water or using it in water may cause the product to malfunction, resulting in injury, electric shock, fire, etc.

4.1.2. Specific warnings

WARNING !



Be sure that the platform is unloaded before any kind of maintenance.

4.2. Maintenance



WARNING !

For any kind of maintenance, always use Asyri products.

4.2.1. Periodic maintenance schedule

Our Asycube are largely maintenance-free, however, simple inspections should be done at regular intervals to ensure optimum performances, and safety operating of your product.

Item		Period	Reference
General	Cleaning of the machine	Week	
	Visual check of electrical harness	Year	
	Visual check and cleaning of the plate	Week	Section 4.2.3
specific process	It is the customer's responsibility to schedule the maintenance of his specific process	/	/
Backlight	Visual check	Month	

Table 4-1 : periodic maintenance schedule

NOTE :



The information given in the "Table 4-1 : periodic maintenance schedule" is only informative, maintenance and times must be modified by the operator in accordance with your particular system, its operating environment and the amount of usage.

4.2.2. Remove the platform module

DANGER !



Be sure that the backlight is off before removing the platform module.



Risk of crushing. Do not place your finger between the platform and the locking mechanism

Step 1 Pull out the integrated tool (A) and move it away for freeing the platform (B)

Step 2 Take the platform out (C)
Release the tool – the mechanism as reverse operation from step 1 to let it goes to its initial position

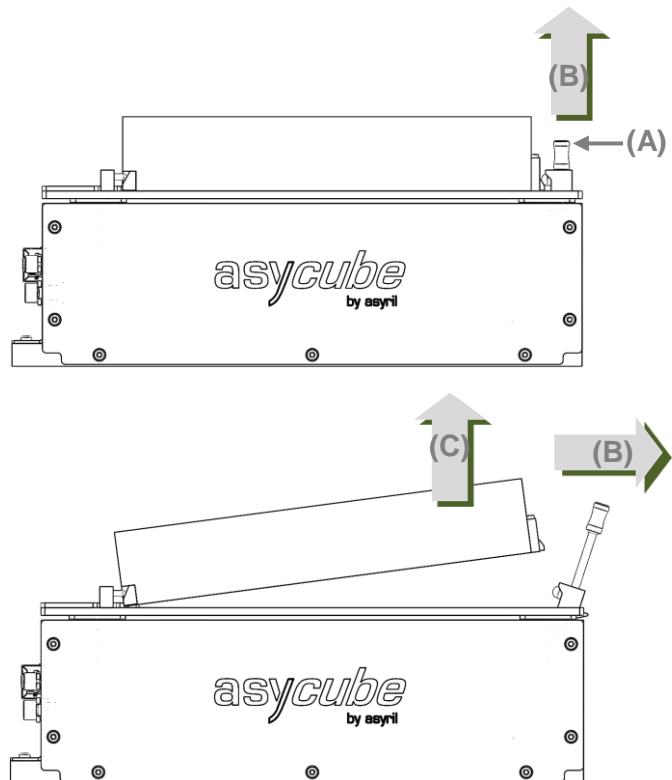


Figure 4-1 : remove the platform

4.2.3. Control and Cleaning of the platform

Material needed :

- Lint-free cloth
- isopropanol alcohol

Step 1 Control the surface state of the platform (A) and be particularly careful to the following points :

- Big claws
- Dirt or spotted surface
- Oily or greasy surface

WARNING :



If the surface is damaged so as to obstruct vision or the behavior of parts, its replacement must be proceeded

Step 2 Clean the surface of the platform

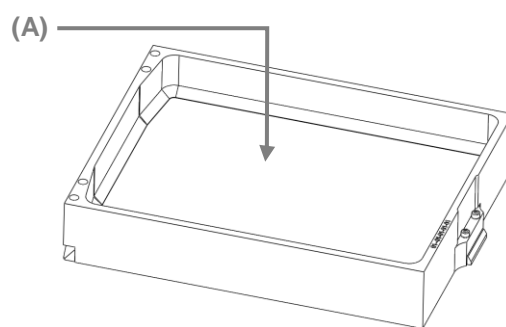


Figure 4-2 : Platform

4.3. Reparation

This section gives a list of the components, which can be replaced directly by the customer.

For any other repair, the product must be returned to the manufacturer.



WARNING !

For any kind of reparation, always use Asyri products.

Part name	Part Number
Backlight assembly Blue	900.006.095
Backlight assembly Green	900.006.093
Backlight assembly Infrared	900.006.097
Backlight assembly Red	900.006.094
Backlight assembly White	900.006.096
Asycube platform 240	660.005.776
Asycube platform fixation kit	660.005.988

Table 4-2 : Replaceable parts

4.3.1. Exchanging / installing the backlight

DANGER !



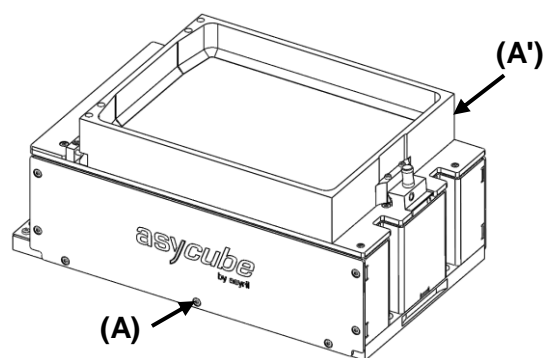
Be sure that all power sources and other cables to the unit are disconnected before changing the backlight.

Material needed :

- New backlight assembly ordered from asyrl
- Flat wrench size 5.5
- Torx key size 10



Step 1 Unscrew the 7 screws on both sides **(A)** and **(A')** and remove the two side covers

Use an torx key size 10



Step 2 On both sides, unscrew the four bolts **(B)**

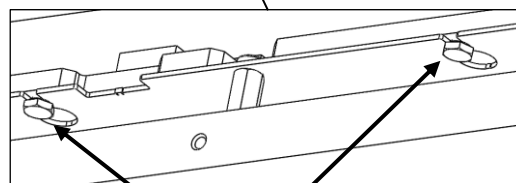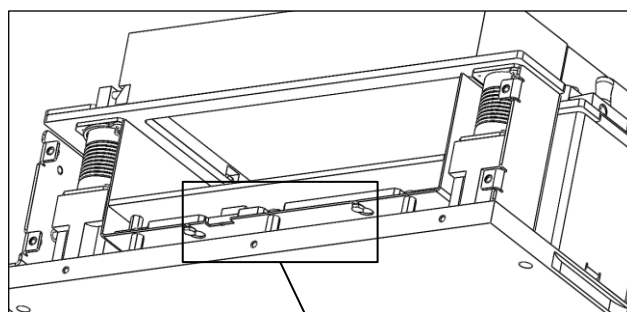
Use a flat wrench size 5.5





(B)

Step 3

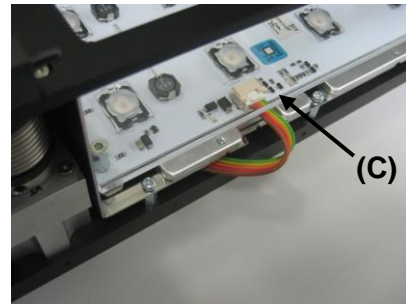Unplug the backlight
connector (C)



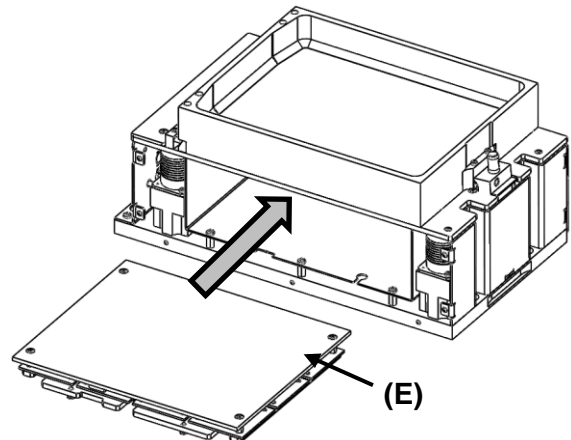
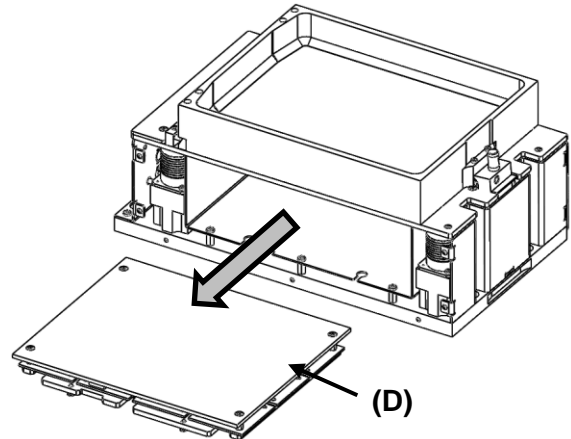
Remove the old backlight (D)
and insert the new backlight
(E)




Step 5 Align the backlight module flush with the mirror support **(F)** and tighten the four

bolts **(G)**

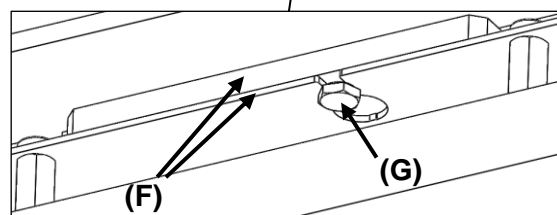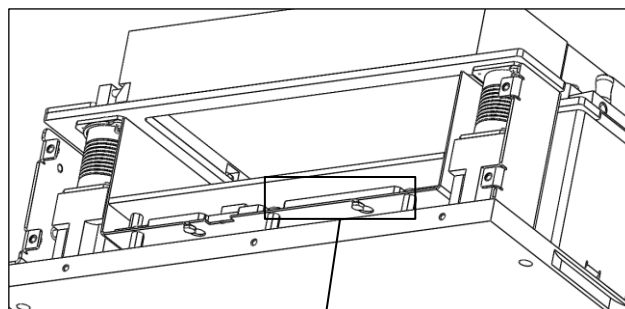Use a flat wrench size 5.5




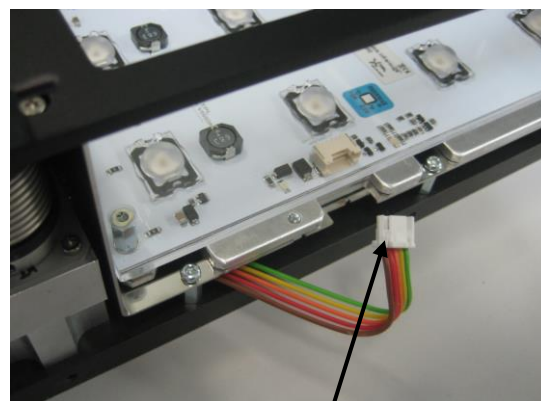Step 6 Plug the backlight connector **(H)**



(H)

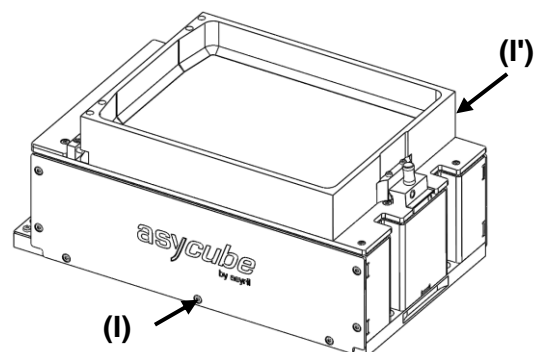Step 7 Remount the covers **(I)** and **(I')** on both sides



4.3.1.1. Configure the Asycube with a new backlight color

You can set the color of the backlight in the Asycube. It is useful for example to be able to adapt interfaces depending of the color or depending if there is no backlight.

- With HMI

To modify the parameter, use the following procedure:

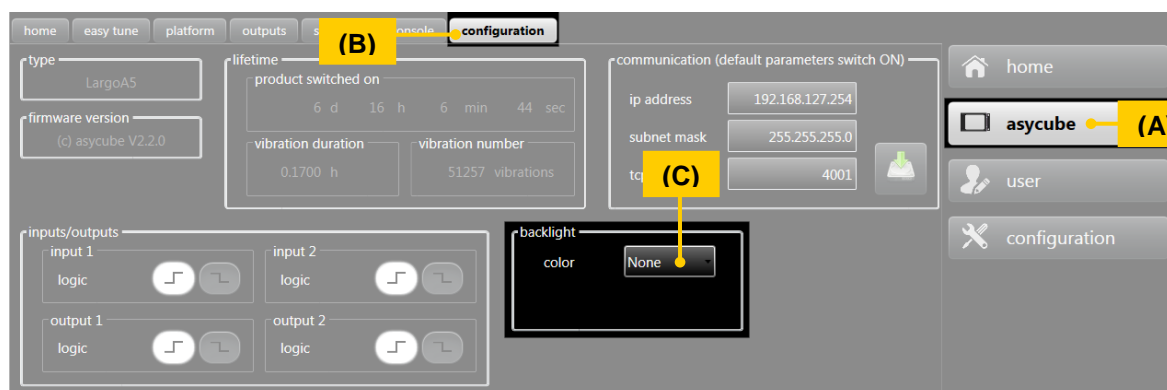


Figure 4-3 : change backlight color in HMI

Ref.	Designation	Description
(A)	"Asycube" button	Press this button to display the Asycube screen.
(B)	"Asycube configuration" button	Press this button to display the Asycube configuration tab.
(C)	"Color" select box	This select box allows selecting the color of the backlight. If "None" is chosen, backlight tab and backlight switches disappear.

For more information about the HMI, please refer to the user interface documentation.

- With dll

To modify the parameter with plugin.Net, use this function:

SetBacklightColor(BacklightColor color, string password)

The password is important, because to write this parameter, you need to be logged in the firmware as Integrator. Password is 1234.

For more information on the DLL, please refer to the integration guide documentation.

- Using tcp commands

To modify the parameter with TCP commands, use this sequence of commands:


Command		Function	More informations
1	{wp7=1234}	Login in integrator mode	
2	{wp97="x"}	Write color of backlight	"x": 0: Green 1: Red 2: Blue 3: IR 4: UV 5: White 99: None
3	{df}	Save configuration in flash memory	
4	{wp7=1}	Logout	

4.3.2. Recover IP address using default IP address



The following procedure explains how to reboot the Asycube on the default IP address, subnet mask and tcp port number to be able to modify IP address, subnet mask and tcp port number when they are unknown and cannot be found. Following this procedure, you are able to connect on the Asycube with default parameters and then modify unknown parameters.

Step 1 Unscrew the 3 screws **(A)**
and remove the cover

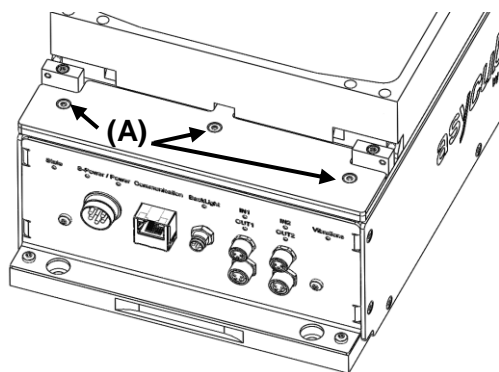Use an torx key size 10



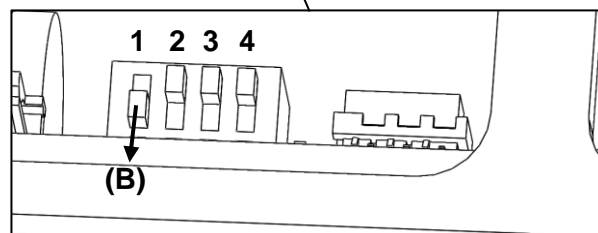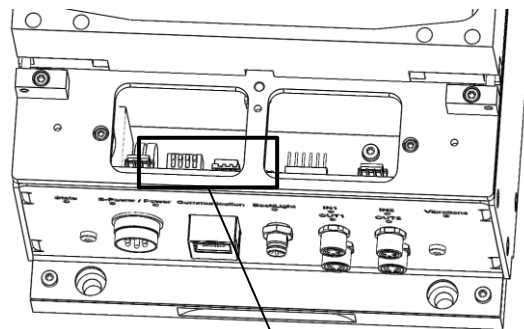Step 2 Place selector 1 in "on" position **(B)**



Step 3 Disconnect and reconnect the power cable (or switch off and switch on the power on the Asycube).

The Asycube will take default parameters at startup :

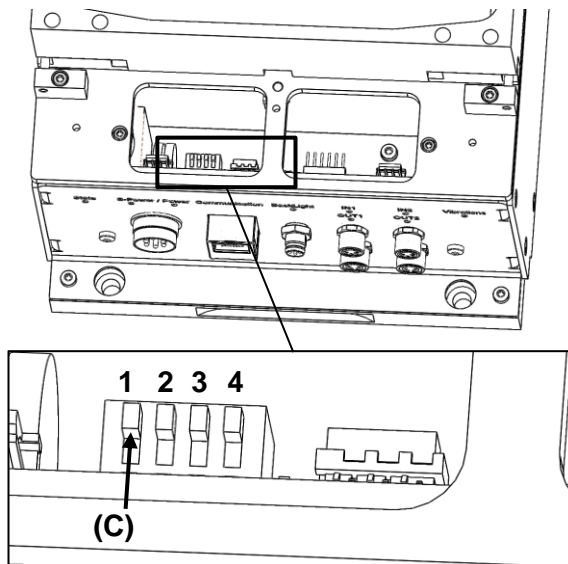
IP: 192.168.127.254

SubnetMask: 255.255.255.0

TCP Port: 4001


Step 4 Parameters in memory can now be modified (by direct access with commands to the Asycube, by functions in dll or by Asycube configuration page in HMI (see relative documentations for more details).


Step 5 When parameters are defined as desired, replace selector 1 in position **(C)**.



Step 6 Disconnect and reconnect the power cable (or switch off and switch on the power on the Asycube).
The Asycube will take the parameters defined by the new startup.

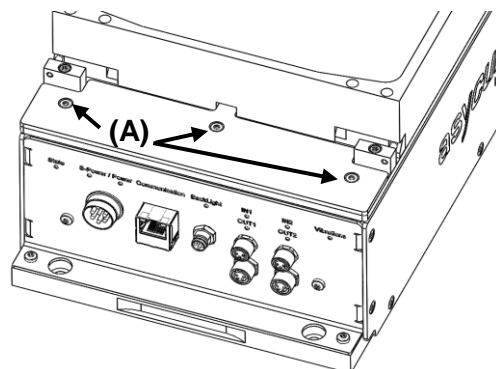Step 7 Replace the cover and screw the 3 screws **(A)**
Use an torx key size 10 (0.9Nm)



 Experts in Flexible Feeding Systems	Asycube 240 - AsyriL SA Operating Manual	© Copyright AsyriL S.A.
Maintenance and reparation	Version: A3	

4.4. Technical support

4.4.1. For better service ...

You have read the related manuals without finding answers to your questions ? Before calling the support service, note the following information for your system:

- serial number and product key of your material
- software version
- alarm or error message displayed on the screen

4.4.2. Contact

You can find lot of information on our website: www.asyril.com

You can also contact us by mail or through our web-site contact form:

support@asyril.com +41 26 653 7190

5. Annexes

5.1. Condition of use of backlight

CONDITIONS OF USE OF PRODUCTS TPL VISION
TABLE OF CALCULATION
THE REQUIREMENTS BELOW ARE IN STRICT COMPLIANCE WITH THE STANDARD
NF EN 62471 "LAMPS PHOTOBIOLOGICAL SAFETY"
THIS DOCUMENT ISN'T A CERTIFICATE AND CAN'T BE USED AS WELL BUT ONLY AS PRECONISATIONS FOR USERS

Sample subjected to calculations	Product reference	Date
1 brick 8 leds 200x150 green	SPE1341-AB2	17/10/2014

Info Source to LEARN

	Exposure time to the direct source	0,25 Secondes
--	------------------------------------	---------------

1	Wavelength	525 nm
	Color temperature	K
2	Total Angle	150 Degrés
3	For the visible:	
	Output Intensity	candelas
	Output Power	150 lumens
	For the Non-Visible:	
	Power density	0,000 W/m²
4	Number of LED	8 LEDs
5	If you use a lense, Efficiency in candela per lumen	2,5 Cd/lm

CALCULATION from information about the Source

Calculation of Maximum Permitted Exposure (EMP) :	25,456 W/m²
	13665,66445 lm/m²
Calculation of power density for visible source :	
Surface illuminated by the source :	0,437567409 m²
Power of one LED =	150 Lumen
Power densité for one LED :	342,804324 lm/m²
Calculation of power density for a non-visible source :	
Surface illuminated by the source :	0,4376 m²
Power Density for one LED :	0,000 W/m²

CALCULATION for the safety of persons

Source Hazardous :	
Power density for a visible source :	2742,434592 lm/m²
Power density for a non-visible source :	0,000 W/m²

NOMINAL DISTANCE TO AVOID OCULAR HAZARD (DNRO)
FOR AN EXPOSURE TIME OF (Seconde): 0,25

Minimum safe distance in this case*	128 mm
-------------------------------------	--------

* Consider as Hazard Zone Optics (NRA), or area within which the irradiance or radiant exposure exceeds the maximum permissible exposure (MPE), all positions within an envelope of the remote DNRO.

informations :
 Exposure time is fixed to 0,25s for this calculation table, which is the latency blink of the eye duration.
 Output power : the maximum output power for the type of LED used in the product is 150 lumens under 350mA.
 Number of Led : In the worst case, we can imagine that the person can see entirely the light.

CONDITIONS OF USE OF PRODUCTS TPL VISION

TABLE OF CALCULATION

THE REQUIREMENTS BELOW ARE IN STRICT COMPLIANCE WITH THE STANDARD

NF EN 62471 "LAMPS PHOTOBIOLOGICAL SAFETY"

THIS DOCUMENT ISN'T A CERTIFICATE AND CAN'T BE USED AS WELL BUT ONLY AS PRECONISATIONS FOR USERS

Sample subjected to calculations	Product reference	Date
1 brick 8 leds 200x150 red	SPE1341-AC2	17/10/2014

Info Source to LEARN

Exposure time to the direct source	0,25 Secondes
1	Wavelength 630 nm
	Color temperature K
2	Total Angle 150 Degrés
3	For the visible: Output Intensity candelas Output Power 80 lumens For the Non-Visible: Power density 0,000 W/m²
4	Number of LED 8 LEDs
5	If you use a lense, Efficiency in candela per lumen 2,5 Cd/lm

CALCULATION from information about the Source

Calculation of Maximum Permitted Exposure (EMP) :	25,456 W/m²
	4607,380507 lm/m²
Calculation of power density for visible source :	
Surface illuminated by the source :	0,437567409 m²
Power of one LED =	80 Lumen
Power densité for one LED :	182,8289728 lm/m²
Calculation of power density for a non-visible source :	
Surface illuminated by the source :	0,4376 m²
Power Density for one LED :	0,000 W/m²

CALCULATION for the safety of persons

Source Hazardous :	
Power density for a visible source :	1462,631782 lm/m²
Power density for a non-visible source :	0,000 W/m²

	NOMINAL DISTANCE TO AVOID OCULAR HAZARD (DNRO)
	FOR AN EXPOSURE TIME OF (Seconde): 0,25
Minimum safe distance in this case*	161 mm

* Consider as Hazard Zone Optics (NRA), or area within which the irradiance or radiant exposure exceeds the maximum permissible exposure (MPE), all positions within an envelope of the remote DNRO.

informations :

Exposure time is fixed to 0,25s for this calculation table, which is the latency blink of the eye duration.
Output power : the maximum output power for the type of LED used in the product is 80 lumens under 350mA.
Number of Led : In the worst case, we can imagine that the person can see entirely the light.

CONDITIONS OF USE OF PRODUCTS TPL VISION

TABLE OF CALCULATION

THE REQUIREMENTS BELOW ARE IN STRICT COMPLIANCE WITH THE STANDARD

NF EN 62471 "LAMPS PHOTOBIOLOGICAL SAFETY"

THIS DOCUMENT ISN'T A CERTIFICATE AND CAN'T BE USED AS WELL BUT ONLY AS PRECONISATIONS FOR USERS

Sample subjected to calculations	Product reference	Date
1 brick 8 leds 200x150 Bleu	SPE1341-AF2	17/10/2014

Info Source to LEARN

Exposure time to the direct source	0,25 Secondes
1	Wavelength 470 nm
	Color temperature K
2	Total Angle 150 Degrés
3	For the visible: Output Intensity candelas Output Power 39 lumens For the Non-Visible: Power density 0,000 W/m²
4	Number of LED 8 LEDs
5	If you use a lense, Efficiency in candela per lumen 2,5 Cd/lm

CALCULATION from information about the Source

Calculation of Maximum Permitted Exposure (EMP) :	25,456 W/m²
	1582,15708 lm/m²
Calculation of power density for visible source :	
Surface illuminated by the source :	0,437567409 m²
Power of one LED =	39 Lumen
Power densité for one LED :	89,12912424 lm/m²
Calculation of power density for a non-visible source :	
Surface illuminated by the source :	0,4376 m²
Power Density for one LED :	0,000 W/m²

CALCULATION for the safety of persons

Source Hazardous :	
Power density for a visible source :	713,0329939 lm/m²
Power density for a non-visible source :	0,000 W/m²

	NOMINAL DISTANCE TO AVOID OCULAR HAZARD (DNRO) FOR AN EXPOSURE TIME OF (Seconde): 0,25
Minimum safe distance in this case*	191 mm

* Consider as Hazard Zone Optics (NRA), or area within which the irradiance or radiant exposure exceeds the maximum permissible exposure (MPE), all positions within an envelope of the remote DNRO.

informations :

Exposure time is fixed to 0,25s for this calculation table, which is the latency blink of the eye duration.
Output power : the maximum output power for the type of LED used in the product is 39 lumens under 350mA.
Number of Led : In the worst case, we can imagine that the person can see entirely the light.

CONDITIONS OF USE OF PRODUCTS TPL VISION

TABLE OF CALCULATION

THE REQUIREMENTS BELOW ARE IN STRICT COMPLIANCE WITH THE STANDARD

NF EN 62471 "LAMPS PHOTOBIOLOGICAL SAFETY"

THIS DOCUMENT ISN'T A CERTIFICATE AND CAN'T BE USED AS WELL BUT ONLY AS PRECONISATIONS FOR USERS

Sample subjected to calculations	Product reference	Date
1 brick 8 leds 200x150 infrared	SPE1341-AD2	17/10/2014

Info Source to LEARN

Exposure time to the direct source	10 Secondes
1	Wavelength 850 nm
	Color temperature K
2	Total Angle 150 Degrés
3	For the visible: Output Intensity candelas Output Power lumens
	For the Non-Visible: Power density 1,028 W/m²
4	Number of LED 8 LEDs
5	If you use a lense, Efficiency in candela per lumen 2,5 Cd/lm

CALCULATION from information about the Source

Calculation of Maximum Permitted Exposure (EMP) :	19,953 W/m²
	Source Non-Visible lm/m²
Calculation of power density for visible source :	
Surface illuminated by the source :	Source Non-Visible m²
Power of one LED =	Source Non-Visible Lumen
Power density for one LED :	Source Non-Visible lm/m²
Calculation of power density for a non-visible source :	
Surface illuminated by the source :	0,4376 m²
Power Density for one LED :	8,227 W/m²
CALCULATION for the safety of persons	
Source Hazardous :	
Power density for a visible source :	Source Non-Visible lm/m²
Power density for a non-visible source :	8,227 W/m²

	NOMINAL DISTANCE TO AVOID OCULAR HAZARD (DNRO)
	FOR AN EXPOSURE TIME OF (Seconde): 10
Minimum safe distance in this case*	183 mm

* Consider as Hazard Zone Optics (NRA), or area within which the irradiance or radiant exposure exceeds the maximum permissible exposure (MPE), all positions within an envelope of the remote DNRO.



informations :


Exposure time is fixed to 10s for this calculation table, which is the max duration according to the standard compliance.

Output power : the maximum output power for the type of LED used in the product is 450mW under 350mA.

Number of Led : In the worst case, we can imagine that the person can see entirely the light.

5.2. CE Certificate

Declaration of incorporation according to the EU Machinery Directive 2006/42/EC, Annex II 1. B for partly completed machinery		
Manufacturer Asyril SA ZI Le Vivier 22 CH - 1690 Villaz-St-Pierre	Person established in the Community authorised to compile the relevant technical documentation Jean-Baptiste Berset Asyril SA ZI Le Vivier 22 CH - 1690 Villaz-St-Pierre	
Description and identification of the partly completed machinery		
Product / Article	ASYCUBE 240	
Type	Asycube Largo A5 / ACUBE 240	
Serial number	14380000 à 50000000	
Function	Smooth vibration feeder for ultra efficient component distribution	
It is declared that the following essential requirements of the Machinery Directive 2006/42/EC have been fulfilled. 1.3., 1.3.7, 1.5.1, 1.5.10, 1.5.11, 1.6.1		
It is also declared that the relevant technical documentation has been compiled in accordance with part B of Annex VII.		
It is expressly declared that the partly completed machinery fulfils all relevant provisions of the following EU Directives.		
2004/108/EC	Directive 2004/108/EC of the European Parliament and of the Council of 15 December 2004 on the approximation of the laws of the Member States relating to electromagnetic compatibility and repealing Directive 89/336/EEC	
2006/42/EC	Directive 2006/42/EC of the European Parliament and of the Council of 17 May 2006 on machinery, and amending Directive 95/16/EC (recast) (1)	
Reference to the harmonised standards used, as referred to in Article 7 (2)		
EN ISO14121-2:2008	Safety of machinery - Risk assessment - Part 2: Practical guidance and examples of methods	
EN ISO 11553-1:2008	Safety of machinery - Laser processing machines - Part 1: General safety requirements (ISO 11553-1:2005)	
EN 60204-1:2006/AC:2010	Safety of machinery - Electrical equipment of machines - Part 1: General requirements	
EN ISO 12100:2010-11	Safety of machinery - General principles for design - Risk assessment and risk reduction (ISO 12100:2010)	
EN ISO 13732-1:2008	Ergonomics of the thermal environment - Methods for the assessment of human responses to contact with surfaces - Part 1: Hot surfaces (ISO 13732-1:2006)	
EN 349:1993+A1:2008	Safety of machinery - Minimum gaps to avoid crushing of parts of the human body	
The manufacturer or his authorised representative undertake to transmit, in response to a reasoned request by the national authorities, relevant information on the partly completed machinery. This transmission takes place - in electronic format		
This does not affect the intellectual property rights!		
Important note! The partly completed machinery must not be put into service until the final machinery into which it is to be incorporated has been declared in conformity with the provisions of this Directive, where appropriate.		
Villaz-St-Pierre, 2016-09-21	 Signature A. Codourey Director	
Place, Date	CH-1690 Villaz-St-Pierre ZI Le Vivier 22 Tél. +41 28 653 71 90 Fax +41 28 653 71 91	

 Experts in Flexible Feeding Systems	Asycube 240 - Asyrl SA Operating Manual	© Copyright Asyrl S.A.
Annexes	Version: A3	

Review history

Rev.	Date	Author	Comments
A	03.10.2014	BeJ	Initial Version
A1	06.11.2014	BeJ	Pt 2.4.2 TBTP modified in PELV, pt 1.4 CE certification
A2	23.04.2015	HsJ	Changes for pinout connectors and power max current.
A2.1	16.06.2015	HsJ	Remove 5V TTL synchro backlight, because it's not guaranteed.
A2.2	15.10.15	BeJ	§2.6.3: "cables not adapted for cable tracks" added
A2.3	07.12.2015	HsJ	§4.4.2: change off to on for switch position
A3	23.06.2016	BeJ	Rename LA5 in 240, cosmetic changes, add fixation kit info

This document is the property of Asyrl S.A. and may not be copied or circulated without permission. The information contained in this document is subject to change without notice for the purpose of product improvement.



asyrl sa
z.i. le vivier 22
ch-1690 villaz-st-pierre
switzerland
tel. +41 26 653 71 90
fax +41 26 653 71 91
info@asyrl.com
www.asyrl.com